



## **BSA — Triumph Spares Interchange**

This spares interchange list was created by BSA sometime in the in the 1970s. The original is archived in the files of the BSA Owners Club of New England. For more information on the BSAOCNE, visit <http://www.bsacne.org>.

This list, and a wealth of BSA manuals, service sheets and other data are available on a CD-ROM published by Kim the CD Man in Australia. For more information, visit [witepr@techinfo.com.au](mailto:witepr@techinfo.com.au)

© 2003 The BSA Owners Club of New England

THE BIRMINGHAM SMALL ARMS COMPANY INCORPORATED  
COMMON PARTS COMPANISON

PAGE 1

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
00-3168	67/71 B25 DECOKE SET	99-1163	EA DECOKE SET
00-3466	69/71A75 STD RINGSET	CP212	RING SET
00-3468	69/71A75 010 RINGSET	CP212/10	RING ASSY 010
00-3469	69/71A75 020 RINGSET	CP212/20	RING ASSY 020
00-3470	69/71A75 040 RINGSET	CP212/40	RING ASSY 040
00-3471	67/71B25 STD RINGSET	CP211	RING PACK
00-3472	67/71B25 020 RINGSET	CP211/20	RING PACK
00-3473	67/71B25 040 RINGSET	CP211/40	PISTON PACK
00-5177	STROBE KIT	CP207	STRUBE KIT
02-0014	BOLT	F9131	BOLT
02-0046	NUT	F8987	NUT
02-0049	NUT	E8133	NUT
02-0051	NUT	E8101	NUT
02-0130	WASHER	E8135	WASHER
02-0204	BOLT	F9019	BOLT
02-0220	BOLT	F9060	BOLT
02-0370	WASHER	F9196	SPACERS
02-0440	NUT	W2332	NUT
02-0443	NUT	U965	NUT
02-0452	NUT	W2316	NUT
02-0510	BOLT	U964	SCREW
02-0522	WASHER	F8986	WASHER
02-0525	WASHER	E8072	WASHER
02-0861	WASHER	W2337	WASHER
02-0923	WASHER	E8088	WASHER
02-1027	NUT	F9042	NUT
02-1096	WASHER	F8979	WASHER
02-1354	BOLT	F9091	BOLT
02-1616	NUT	F9026	NUT
02-1925	NUT	F9033	NUT
02-1945	WASHER	F9049	WASHER
02-1967	WASHER	F9034	WASHER
02-2138	WASHER	E8084	WASHER
02-2395	NUT	F879	NUT
02-2578	NUT	T2706	NUT
02-2579	PIN	T2704	K/START COTTER
02-4553	WASHER	E8159	PLUG WASHER
03-0938	BOLT	E8192	BOLT
14-0605	SCREW	14-0605	SCREW
14-0701	NUT	14-0701	NUT
14-0702	NUT	14-0702	NUT
14-0901	NUT	14-0901	NUT
14-0902	NUT	14-0902	NUT
14-1401	STUD	14-1401	STUD
14-1427	STUD	14-1427	STUD
14-1431	STUD	14-1431	STUD
14-1436	STUD	14-1436	STUD
14-1445	STUD	14-1445	STUD
14-1608	A/STUD	14-1606	OIL PUMP STUD
14-1619	STUD	14-1619	STUD
14-1620	A/CARB STUD	14-1620	STUD
14-1627	A/STUD	14-1627	STUD
14-1628	A/STUD	14-1628	STUD

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
14-1629	STUD	14-1629	STUD
14-1635	A/STUD	14-1635	A/ANCHOR PLATE STUD
14-6606	SCREW	14-6606	SCREW
14-6607	OUTR TMG COV SCREW	14-6607	SCREW
14-6608	SCREW	14-6608	SCREW
14-6609	SCREW	14-6609	SCREW
14-6610	SCREW	14-6610	SCREW
14-6611	SCREW	14-6611	SCREW
14-6612	SCREW	14-6612	SCREW
14-6613	SCREW	14-6613	SCREW
14-6614	SCREW	14-6614	SCREW
14-6615	SCREW	14-6615	SCREW
14-6620	SCREW	14-6620	ALLEN SCREW
14-6626	SCREW	14-6626	SCREW
14-7101	SCREW	14-7101	SCREW
14-7308	LOCKNUT	14-7308	LOCKNUT
14-7804	SCREW	14-7804	LEVEL PLUG
15-0431	WASHER	W2330	WASHER
15-0518	BOLT	FY088	BOLT
15-7563	COLLAR	FY092	SPACER
16714	SWITCH	F8318	HORN PUSH
19-2064	HORN	D992	HORN
19-2064	HORN	F7552	12 VOLT HORN
19-4590	OIL FILTER ELEMENT	99-1179	ELEMENT
19-5152	KEY FOR LOCK #EJR 2	19-5152	KEY FOR LOCK #EJR 2
19-5153	KEY FOR LOCK #EJR 3	19-5153	KEY FOR LOCK #EJR 3
19-5154	KEY FOR LOCK #EJR 4	19-5154	KEY FOR LOCK #EJR 4
19-5155	KEY FOR LOCK #EJR 5	19-5155	KEY FOR LOCK #EJR 5
19-5156	KEY FOR LOCK #EJR 6	19-5156	KEY FOR LOCK #EJR 6
19-5157	KEY FOR LOCK #EJR 7	19-5157	KEY FOR LOCK #EJR 7
19-5158	KEY FOR LOCK #EJR 8	19-5158	KEY FOR LOCK #EJR 8
19-5159	KEY FOR LOCK #EJR 9	19-5159	KEY FOR LOCK #EJR 9
19-5160	KEY FOR LOCK #EJR 10	19-5160	KEY FOR LOCK #EJR 10
19-5161	KEY FOR LOCK #EJR 11	19-5161	KEY FOR LOCK #EJR 11
19-5162	KEY FOR LOCK #EJR 12	19-5162	KEY FOR LOCK #EJR 12
19-5163	KEY FOR LOCK #EJR 13	19-5163	KEY FOR LOCK #EJR 13
19-5164	KEY FOR LOCK #EJR 14	19-5164	KEY FOR LOCK #EJR 14
19-5165	KEY FOR LOCK #EJR 15	19-5165	KEY FOR LOCK #EJR 15
19-5166	KEY FOR LOCK #EJR 16	19-5166	KEY FOR LOCK #EJR 16
19-5167	KEY FOR LOCK #EJR 17	19-5167	KEY FOR LOCK #EJR 17
19-5168	KEY FOR LOCK #EJR 18	19-5168	KEY FOR LOCK #EJR 18
19-5169	KEY FOR LOCK #EJR 19	19-5169	KEY FOR LOCK #EJR 19
19-5170	KEY FOR LOCK #EJR 20	19-5170	KEY FOR LOCK #EJR 20
19-5171	KEY FOR LOCK #EJR 21	19-5171	KEY FOR LOCK #EJR 21
19-5172	KEY FOR LOCK #EJR 22	19-5172	KEY FOR LOCK #EJR 22
19-5173	KEY FOR LOCK #EJR 23	19-5173	KEY FOR LOCK #EJR 23
19-5174	KEY FOR LOCK #EJR 24	19-5174	KEY FOR LOCK #EJR 24
19-5175	KEY FOR LOCK #EJR 25	19-5175	KEY FOR LOCK #EJR 25
19-5176	KEY FOR LOCK #EJR 26	19-5176	KEY FOR LOCK #EJR 26
19-5177	KEY FOR LOCK #EJR 27	19-5177	KEY FOR LOCK #EJR 27
19-5178	KEY FOR LOCK #EJR 28	19-5178	KEY FOR LOCK #EJR 28
19-5179	KEY FOR LOCK #EJR 29	19-5179	KEY FOR LOCK #EJR 29
19-5180	KEY FOR LOCK #EJR 30	19-5180	KEY FOR LOCK #EJR 30

H S A		T R I U M P H	
ART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
19-5181	KEY FOR LOCK #EJR 31	19-5181	KEY FOR LOCK #EJR 31
19-5182	KEY FOR LOCK #EJR 32	19-5182	KEY FOR LOCK #EJR 32
19-5183	KEY FOR LOCK #EJR 33	19-5183	KEY FOR LOCK #EJR 33
19-5184	KEY FOR LOCK #EJR 34	19-5184	KEY FOR LOCK #EJR 34
19-5185	KEY FOR LOCK #EJR 35	19-5185	KEY FOR LOCK #EJR 35
19-5186	KEY FOR LOCK #EJR 36	19-5186	KEY FOR LOCK #EJR 36
19-5187	KEY FOR LOCK #EJR 37	19-5187	KEY FOR LOCK #EJR 37
19-5188	KEY FOR LOCK #EJR 38	19-5188	KEY FOR LOCK #EJR 38
19-5189	KEY FOR LOCK #EJR 39	19-5189	KEY FOR LOCK #EJR 39
19-5190	KEY FOR LOCK #EJR 40	19-5190	KEY FOR LOCK #EJR 40
19-5191	KEY FOR LOCK #EJR 41	19-5191	KEY FOR LOCK #EJR 41
19-5192	KEY FOR LOCK #EJR 42	19-5192	KEY FOR LOCK #EJR 42
19-5193	KEY FOR LOCK #EJR 43	19-5193	KEY FOR LOCK #EJR 43
19-5194	KEY FOR LOCK #EJR 44	19-5194	KEY FOR LOCK #EJR 44
19-5195	KEY FOR LOCK #EJR 45	19-5195	KEY FOR LOCK #EJR 45
19-5196	KEY FOR LOCK #EJR 46	19-5196	KEY FOR LOCK #EJR 46
19-5197	KEY FOR LOCK #EJR 47	19-5197	KEY FOR LOCK #EJR 47
19-5198	KEY FOR LOCK #EJR 48	19-5198	KEY FOR LOCK #EJR 48
19-5199	KEY FOR LOCK #EJR 49	19-5199	KEY FOR LOCK #EJR 49
19-5200	KEY FOR LOCK #EJR 50	19-5200	KEY FOR LOCK #EJR 50
19-5614	IGN KEY FS876	19-5614	IGN KEY FS876
19-5615	IGN KEY FS877	19-5615	IGN KEY FS877
19-5616	IGN KEY FS878	19-5616	IGN KEY FS878
19-5617	IGN KEY FS879	19-5617	IGN KEY FS879
19-5618	IGN KEY FS880	19-5618	IGN KEY FS880
19-5619	IGN KEY FS881	19-5619	IGN KEY FS881
19-5620	IGN KEY FS882	19-5620	IGN KEY FS882
19-5621	IGN KEY FS883	19-5621	IGN KEY FS883
19-5622	IGN KEY FS884	19-5622	IGN KEY FS884
19-5623	IGN KEY FS885	19-5623	IGN KEY FS885
19-5624	IGN KEY FS886	19-5624	IGN KEY FS886
19-5625	IGN KEY FS887	19-5625	IGN KEY FS887
19-5626	IGN KEY FS888	19-5626	IGN KEY FS888
19-5627	IGN KEY FS889	19-5627	IGN KEY FS889
19-5628	IGN KEY FS890	19-5628	IGN KEY FS890
19-5629	IGN KEY FS891	19-5629	IGN KEY FS891
19-5630	IGN KEY FS892	19-5630	IGN KEY FS892
19-5631	IGN KEY FS893	19-5631	IGN KEY FS893
19-5632	IGN KEY FS894	19-5632	IGN KEY FS894
19-5633	IGN KEY FS895	19-5633	IGN KEY FS895
19-5634	IGN KEY FS896	19-5634	IGN KEY FS896
19-5635	IGN KEY FS897	19-5635	IGN KEY FS897
19-5636	IGN KEY FS898	19-5636	IGN KEY FS898
19-5637	IGN KEY FS899	19-5637	IGN KEY FS899
19-5638	IGN KEY FS900	19-5638	IGN KEY FS900
19-5639	IGN KEY FS901	19-5639	IGN KEY FS901
19-5640	IGN KEY FS902	19-5640	IGN KEY FS902
19-5641	IGN KEY FS903	19-5641	IGN KEY FS903
19-5642	IGN KEY FS904	19-5642	IGN KEY FS904
19-5643	IGN KEY FS905	19-5643	IGN KEY FS905
19-5644	IGN KEY FS906	19-5644	IGN KEY FS906
19-5645	IGN KEY FS907	19-5645	IGN KEY FS907
19-5646	IGN KEY FS908	19-5646	IGN KEY FS908

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
19-5647	IGN KEY FS909	19-5647	IGN KEY FS909
19-5648	IGN KEY FS910	19-5648	IGN KEY FS910
19-5649	IGN KEY FS911	19-5649	IGN KEY FS911
19-5650	IGN KEY FS912	19-5650	IGN KEY FS912
19-5651	IGN KEY FS913	19-5651	IGN KEY FS913
19-5652	IGN KEY FS914	19-5652	IGN KEY FS914
19-5653	IGN KEY FS915	19-5653	IGN KEY FS915
19-5654	IGN KEY FS916	19-5654	IGN KEY FS916
19-5655	IGN KEY FS917	19-5655	IGN KEY FS917
19-5656	IGN KEY FS918	19-5656	IGN KEY FS918
19-5657	IGN KEY FS919	19-5657	IGN KEY FS919
19-5658	IGN KEY FS920	19-5658	IGN KEY FS920
19-5659	IGN KEY FS921	19-5659	IGN KEY FS921
19-5660	IGN KEY FS922	19-5660	IGN KEY FS922
19-5661	IGN KEY FS923	19-5661	IGN KEY FS923
19-5662	IGN KEY FS924	19-5662	IGN KEY FS924
19-5663	IGN KEY FS925	19-5663	IGN KEY FS925
19-5664	IGN KEY FS926	19-5664	IGN KEY FS926
19-5666	IGN KEY FS928	19-5666	IGN KEY FS928
19-5667	IGN KEY FS929	19-5667	IGN KEY FS929
19-5668	IGN KEY FS930	19-5668	IGN KEY FS930
19-5669	IGN KEY FS931	19-5669	IGN KEY FS931
19-5670	IGN KEY FS932	19-5670	IGN KEY FS932
19-5671	IGN KEY FS933	19-5671	IGN KEY FS933
19-5672	IGN KEY FS934	19-5672	IGN KEY FS934
19-5673	IGN KEY FS935	19-5673	IGN KEY FS935
19-5674	IGN KEY FS936	19-5674	IGN KEY FS936
19-5675	IGN KEY FS937	19-5675	IGN KEY FS937
19-5676	IGN KEY FS938	19-5676	IGN KEY FS938
19-5677	IGN KEY FS939	19-5677	IGN KEY FS939
19-5678	IGN KEY FS940	19-5678	IGN KEY FS940
19-5679	IGN KEY FS941	19-5679	IGN KEY FS941
19-5681	IGN KEY FS943	19-5681	IGN KEY FS943
19-5682	IGN KEY FS944	19-5682	IGN KEY FS944
19-5683	IGN KEY FS945	19-5683	IGN KEY FS945
19-5684	IGN KEY FS946	19-5684	IGN KEY FS946
19-5685	IGN KEY FS947	19-5685	IGN KEY FS947
19-5686	IGN KEY FS948	19-5686	IGN KEY FS948
19-5687	IGN KEY FS949	19-5687	IGN KEY FS949
19-5688	IGN KEY FS950	19-5688	IGN KEY FS950
19-5689	IGN KEY FS951	19-5689	IGN KEY FS951
19-5690	IGN KEY FS952	19-5690	IGN KEY FS952
19-5691	IGN KEY FS953	19-5691	IGN KEY FS953
19-5692	IGN KEY FS954	19-5692	IGN KEY FS954
19-5693	IGN KEY FS955	19-5693	IGN KEY FS955
19-7800	CLUTCH ASSY	T2562	CLUTCH ASSY
19-7801	CL END COVER	T3705	END COVER ASSY
19-7802	CL HOUSING	T3708	DRIVE RING
19-7803	CLUTCH FRICT PLATE	T3709	DRIVEN PLATE ASSY
19-7804	CL PRESSURE PLATE	T3715	PRESSURE PLATE
19-7805	CL SPRING	T3718	DIAPHRAM SPRING
19-7806	CL BOLT	T3719	BOLT
19-7807	CL LOCK WASHER	T3720	TAB WASHER

ART NUMBER	B S A PART DESCRIPTION	PART NUMBER	T R I U M P H PART DESCRIPTION
19-7808	CL BEARING	T3717	THRUST BEARING
19-7809	CLUTCH SERVICE PACK	CU604	CLUTCH FACING KIT
19-9207	SPEEDOG/B BG5330/847	U489	SPEEDO GEAR BOX
21-0536	DRAIN PLUG	S536	DRAIN PLUG
21-0541	BOLT	S541	BOLT
21-0543	BOLT 1/4 X 1/4 UNF	S543	BOLT
21-0544	NUT	S544	NUT
21-0547	STUD	S547	STUD
21-0548	STUD	S548	STUD
21-0550	DOMED NUT	S550	DOMED NUT
21-0557	STUD	S557	ADAPTOR STUD
21-0559	SCREW	S559	PUMPCOVER SCREW
21-0567	LOCK NUT	S567	LOCKNUT
21-0578	GRUB SCREW	S578	SCREW
21-0585	NUT	S585	SPRCKET NUT
21-0589	BOLT	S589	BOLT
21-0594	NUT M/S	S594	NUT
21-0597	STUD	S597	A/OIL PUMP STUD
21-0644	B/BOLT	S644	BOLT
21-0649	SCREW	S649	WASHER
21-0671	BOLT	S671	BOLT
21-0673	STUD	S673	CARB STUD
21-0677	LOCKNUT	S677	STATOR NUT
21-0678	SCREW	S678	ALLEN SCREW
21-0680	SCREW	S680	COVER SCREW
21-0681	NUT	S681	HUB NUT
21-0684	BOLT	S684	BOLT
21-0685	NUT	S685	NUT
21-0686	STUD	S686	HEAD STUD
21-0692	NUT	S692	NUT
21-0755	NUT	S755	NUT
21-0771	BOLT	S771	BOLT
21-0774	SCREW	S774	ADAPTOR SCREW
21-0778	NUT	S778	A/NUT
21-0785	BOLT	S785	PINCH BOLT
21-1802	BOLT	S1802	BOLT
21-1809	DOMED NUT	S1809	NUT
21-1819	BOLT	S1819	C/CASE BOLT
21-1820	BOLT	S1820	I/COVER BOLT
21-1822	BOLT	S1822	BOLT
21-1852	NUT	S1852	NUT
21-1855	USE 14-7804	S1855	LEVEL PLUG
21-1857	DRAIN PLUG	S1857	PLUG
21-1872	SEALING PLUG	S1872	PLUG
21-1879	SCREW	S1879	SCREW
21-1889	STUD	S1889	STUD
21-1890	STUD	S1890	STUD
21-1891	STUD	S1891	STUD
21-1892	BOLT	S1892	BOLT
21-1893	STUD	S1893	STUD
21-1894	STUD	S1894	STUD
21-1895	STUD	S1895	STUD
21-1896	STUD	S1896	STUD

THE BIRMINGHAM SMALL ARMS COMPANY INCORPORATED  
COMMON PARTS COMPARIISON

PART NUMBER	B S A PART DESCRIPTION	PART NUMBER	T R I U M P H PART DESCRIPTION
21-1908	NUT 5/16 UNF	S1908	NUT
21-1910	BOLT	S1910	BOLT
21-1912	STUD	S1912	STUD
21-1917	SCREW	S1917	SCREW
21-1930	SCREW	S1930	A/SCREW
21-1931	STUD	S1931	STUD
21-1934	BOLT	S1934	BOLT
21-1940	A/SCREW	S1940	REFLECTOR SCREW
21-1943	DRAIN SCREW	S1943	SCREW
21-1945	SUMP PLATE DRAINPLUG	S1945	DRAIN PLUG
21-1951	SCREW	S1951	COVER SCREW
21-1969	BOLT FOOTREST TO FRM	S1969	FOOTREST BOLT
21-1972	PLUG	S1972	NOT AVAILABLE
21-1985	A/STUD	S1985	STUD
21-1995	NUT	S1995	ANCHOR PLATE NUT
21-1998	SCREW	S1998	SCREW
21-1998	SCREW	S650	SCREW
21-1999	NUT	S1999	NUT
21-2010	BOLT	S2010	BOLT
21-2011	BOLT	S2011	BOLT
21-2013	NUT	S2013	NUT
21-2014	NUT	S2014	NUT INNER DS
21-2015	OIL DRAIN PLUG	S2015	DRAIN PLUG
21-2016	A/NUT	S2016	SELF LCKG NUT
21-2024	STUD	S2024	BOLT
21-2042	A/STUD	S2042	STUD
21-2044	A/SCREWED PLUG	S2044	A/VALVE SCREW
21-2045	BRAKE PEDAL PIVOT	S2045	PIVOT PIN
21-2047	FORK END CAP STUD	S2047	STUD
21-2048	PIVOT PIN	S2048	PIVOT PIN
21-2060	BATT CARRIER SUP BLT	S2060	BOLT
21-2061	BOTTOM ENG STUD	S2061	STUD
21-2062	SLEEVE NUT	S2062	SLEEVE NUT
21-2063	ANCHOR PLATE STUD	S2063	STUD
21-2067	SCREW	S2067	SCREW
21-2073	SCREW	S2073	A/SCREW
21-2075	STUD	S2075	SLEEVE NUT
21-2077	PIVOT BOLT	S2077	STUD
21-2087	S/ARM PIVOT STUD	S2087	STUD
21-2092	A/STUD	S2092	STUD
21-2096	STUD	S2096	HOOKED STUD
21-2099	A/BOLT	S2099	A/BOLT
21-2102	A/STUD	S2102	STUD
21-2109	A/STUD	S2109	A/STUD
21-2117	NUT	S2117	FEED & SCAN NUT
21-2160	B/STUD B50	S2160	STUD
21-5102	NUT	S5102	NUT
21-5161	NUT	S5161	NUT
21-5375	SCREW	S5375	SCREW
21-5617	BOLT	E8181	BOLT
21-5662	BOLT	S5662	BOLT
24-0036	WASHER	E8256	WASHER
24-5160	NUT	E8196	NUT

THE BIRMINGHAM SMALL ARMS COMPANY INCORPORATED  
COMMON PARTS COMPARISON

PAGE 7

ART NUMBER	B S A PART DESCRIPTION	PART NUMBER	T R I U M P H PART DESCRIPTION
24-6040	NUT	E8087	NUT
24-7068	WASHER	F9172	WASHER
24-8784	LOCKWASHER	W2320	WASHER
27-5135	BOLT	H2645	BOLT
27-5676	WASHER	F9046	WASHER
27-8560	WASHER	S602	WASHER
28-2080	NIPPLE	W2326	NIPPLE
28-2338	BOLT	F9023	BOLT
29-0541	WASHER	F9041	WASHER
29-2053	NUT	E8146	NUT
29-2054	WASHER	E8224	LOCK WASHER
29-2089	NUT	E8110	NUT
29-3319	WASHER	E8165	WASHER
29-3857	BEARING	E8014	BEARING
29-5338	WASHER	H2640	PLUG WASHER
29-5347	BUSH	H2638	BOTTOM BEARING
29-5871	TOGGLE	U963	TOGGLE
29-7898/003	FILLER CAP	F3220	TANK CAP
29-7962	FILTER	F9071	FILTER
29-7971	WASHER	F9070	UNION WASHER
29-9252	TYRE LEVER	D973	SPANNER
30-0196	WASHER	F9035	WASHER
30-0733	WASHER	F9010	WASHER
1-0222	STUD	E8012	STUD
35-4224	WASHER	F8998	WASHER
36-0382	WASHER	E8134	WASHER
37-0270	RIM	W270A	RIM
37-0545	WASH. UN BOLT HEAD	W545	WASHER
37-0680	B/CIRCLIP	W680	CIRCLIP
37-0977	BRAKE SHOE CPT	W977	BRAKE SHOE
37-1021	BEARING RETAINER	99-0057	RETAINING RING
37-1022	BACKING RING	W1022	BACKING RING
37-1024	DIST PIECE	W1024	SPACER
37-1083	CAM	W1083	BRAKE CAM
37-1090	SPRING	W1090	LEVER SPRING
37-1104	SPOKE	W1104	SPOKE
37-1106	SPOKE	W1106	SPOKE
37-1112	BRAKE PLATE ASSY.	W1112W	ANCHOR PLATE
37-1112	BRAKE PLATE ASSY.	W1112	ANCHOR PLATE
37-1197	WEIGHT 3/4 OZ	W1197	BALANCE WT 1/2 OZ
37-1198	WEIGHT 1 OZ	W1198	WEIGHT 1
37-1230	RIM	W1230CH	FRONT RIM
37-1237	LH OUTER GREASE CAP	W1237	GREASE CAP OUTER LH
37-1278	SPACER TUBE	W1278	DISTANCE TUBE
37-1280	WASHER	W1280	WASHER
37-1281	SPINDLE	W1281	WHEEL SPINDLE
37-1301	ANCHOR PLATE	W1301	ANCHOR PLATE
37-1328	SPOKE	W1328	SPOKE
37-1330	FR BH ANCHOR PLATE	W1330	ANCHOR PLATE
37-1331	FR BH LEVER	W1331	USE 1EA W 1331/034
37-1373	RIM	W1373	FR WHEEL RIM
37-1374	RIM	W1374	WHEEL RIM
37-1467	PIN	W1467	PIVOT PIN

THE BIRMINGHAM SMALL ARMS COMPANY INCORPORATED  
COMMON PARTS COMPARISON

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
37-1474	WASHER	W1474	SHIM
37-1476	SPEED DR RING	W1476	ADAPTOR
37-1477	DISTANCE PIECE	W1477	SPACER
37-1481	GREASECAP	W1481	CAP
37-1497	SPOKE	W1497	SPUKE
37-1498	BR DRUM	W1498	BRAKE DRUM
37-1500	BOLT	W1500	BOLT
37-1635	GREASE RETAINER	W1635	LOCATING DISC
37-1639	FULL PIN	W1639	FULCRUM PIN
37-1640	STOP	W1711	ABUTMENT
37-1640	STOP	W1640	ABUTMENT
37-1641	FR WHEEL SPINDLE	W1641	WHEEL SPINDLE
37-1654	DUST CAP	W1654	RETAINER
37-1690	BOLT	W1690	BOLT
37-1708	SPOKE=OUTER	W1708	SPUKE
37-1709	SPOKE=INNER	W1709	SPUKE
37-1710	LOCKING SCREW	W1710	SCREW
37-1722	HUB & BRAKE DRUM	W1722	HUB
37-1730	SPOKE	W1730	SPUKE
37-1731	FR SPOKE T/S	W1731	SPUKE
37-1733	TRAILING BRAKE SHOE	W1733	BRAKE SHOE
37-1798	A/NUT	W1798	NUT
37-1990	ANCHUR PLATE	W1990	ANCHOR PLATE
37-1991	GAUZE	W1991	GAUZE
37-1992	NAME PLATE	W1992	NAME PLATE
37-1996	BR SHOE	W1996	BRAKE SHOE
37-1999	LEVER	W1999	BRAKE LEVER
37-2000	LEVER	W2000	BRAKE LEVER
37-2001	BR CAM	W2001	BRAKE CAM
37-2003	ROD ASSY	W2003	ROD ASSY
37-2005	FR BR ROD FORK-END	W2005	FORK END
37-2015	BR PLATE LEVER	W2015	BRAKE LEVER
37-2026	PAD	W2026	ABUTMENT PAD
37-2027	WASHER	W2027	WASHER
37-2058	USE 21-1995	W2058	NUT
37-2059	RIVET	W2059	RIVET
37-2069	BR CAM	W2069	FRONT BRAKE CAM
37-2085	S/ARM SPINDLE WASHR	W2085	WASHER
37-2089	WHEEL ADJUSTER D/S	W2089	CHAIN ADJUSTER
37-2092	SCREW	W2092	SCREW
37-2136	NIPPLE	W2136	SPUKE NIPPLE
37-2210	COVER PLATE	W2210	COVER PLATE
37-2226	BRAKE CAM CPT	W2226	CAM
37-2259	SPOKE	W1275	SPUKE
37-2294	NIPPLE SPOKE	W2294	NIPPLE
37-3337	RING	W3337	BEARING SUPPORT RING
37-3411	SPROCKET	W3411	SPKT 52T
37-3425	NUT	W3425	NUT INNER DS
37-3426	RETAINING NUT	W3426	NUT
37-3429	ANCHUR PLATE	W3429	PLATE
37-3443	BRAKE PLATE	W3443	NAME PLATE
37-3444	GAUZE	W3444	AIR SCUOP GAUZE
37-3446	FR BRAKE SHOE	W3446	BRAKE SHOE

THE BIRMINGHAM SMALL ARMS COMPANY INCORPORATED  
COMMON PARTS COMPARISON

PART NUMBER	B S A PART DESCRIPTION	PART NUMBER	T R I U M P H PART DESCRIPTION
37-3450	FT BRAKE ROD	W3450	BRAKE ROD
37-3453	BRAKE	W3453	LEVER FRONT
37-3454	FR BRAKE LEVER	W3454	LEVER REAR
37-3455	BRAKE-PLATE	W3455	ANCHOR PLATE
37-3458	FRONT WHEEL	W3458	FR WHEEL CPTC
37-3460	FRONT HUB NAVE PLATE	W3460	COVER PLATE
37-3461	ANCHOR PLATE CP	W3461	ANCHOR PLATE
37-3462	FR BR ANCHOR PLATE	W3462	BRAKE ANCHOR PLATE
37-3522	SPRING	W3522	SPRING
37-3575	SPOKE	W3575	SPOKE
37-3582	WHEELSPINDLE	W3582	WHEEL SPINDLE
37-3585	REAR BRAKE DRUM	W3585	BRAKE DRUM
37-3587	RETAINING RING	W3587	RETAINING RING
37-3588	RING	W3588	SPEEDO ADAPTOR
37-3589	SPINDLE	W3589	WHEEL SPINDLE
37-3590	R/BRAKE-A/PLATE	W3590	ANCHOR PLATE
37-3592	CAM	W3592	BRAKE CAM
37-3655	FR ANCHOR PLATE	W3655	ANCHOR PLATE
37-3658	DRUM & FRONT BRAKE	W3658	BRAKE DRUM
37-3694	FRONT BRAKE LEVER	W3694	BRAKE LEVER
37-3695	SPOKE	W3695	SPOKE
37-3696	SPOKE	W3696	SPOKE
37-3697	SPOKE	W3697	SPOKE
37-3704	BRAKE ANCHOR PLATE	W3704	ANCHOR PLATE
37-3714	BRAKE RETURN SPRING	W3714	RETURN SPRING
37-3715	BRAKESHOE ADJ CAGE	W3715	CAGE
37-3716	ADJUSTER	W3716	ADJUSTER
37-3717	ABUTMENT PRESSING	W3717	PRESSING
37-3724	SPOKE	W3724	SPOKE
37-3725	OUTER SPOKE D/SIDE	W3725	SPOKE
37-3726	SPOKE	W3726	SPOKE
37-3741	R/WHEEL SPROCKET	W3741	52T REAR SPROCKET
37-3742	REAR WHEEL ADJUSTER	W3742	CHAIN ADJUSTER
37-3746	REAR HUB SPACER	W3746	DISTANCE PIECE
37-3747	R/WHEEL SPROCKET	W3747	SPROCKET
37-3749	SUPPORT RING	W3749	SUPPORT RING
37-3750	SPACER	W3750	DISTANCE PIECE
37-3751	SPEEDO DRIVE RING	W3751	DRIVE SPRING
37-3752	LOCK RING	W3752	LOCKING SPRING
37-3753	BEARING SPACER	W3753	SPACER
37-3759	LOCK NUT	W3759	LOCK RING
37-3761	O RING	W3761	O RING
37-3762	TAPPET	W3762	BRAKE CAM
37-3773	DRUM	W3773	HUB & BRAKE DRUM
37-3774	R/WHEEL SPINDLE	W3774	WHEEL SPINDLE
37-3782	REAR RIM & HUB	W3782	HUB & SPOKE ASSY
37-3783	REAR RIM & HUB	W3783	REAR WHEEL LESS RIM
37-3784	REAR WHEEL RIM	W3784	WHEEL RIM
37-3785	RIM WM2-18	W3785	RIM WM2X18
37-3792	A/FRONT WHEEL	W3792	A/FR WHEEL CPTC
37-3794	WHEEL ASSY	W3794	RIM SPOKES & HUB
37-3795	FR WHEEL RIM	W3795	WHEEL RIM
37-3796	SPINDLE	W3796	WHEEL SPINDLE

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
37-3797	RETAINER	W3797	GREASE RETAINER
37-3798	FULCRUM PIN	W3798	FULCRUM PIN
37-3799	F/BRAKE CAM	W3799	CAM
37-3804	BRAKE SHOE	W3804	BRAKE SHOE
37-3816	SPOKE R/H INNER	W3816	SPOKE
37-3817	SPOKE	W3817	SPOKE
37-3818	F/HEEL RIM	W3818	RIM
37-3819	R.H. SPOKE 0	W3819	A/R.H. OUTER SPOKE
37-3820	SPOKE	W3820	SPOKE
37-3821	SPOKE	W3821	SPOKE
37-3840	WHEEL CPT E	W3840	RIM SPOKES & HUB
37-3844	RIM & HUB ASSY	W3844	RIM SPOKES & HUB
37-3845	WHEEL COMPLETE	W3845	FR WHEEL CPT E
37-3856	ANCHOR PLATE	W3856	ANCHOR PLATE
37-3857	R/BRAKE ANCHOR PLATE	W3857	ANCHOR PLATE
37-3868	BRAKE CABLE	W3868	BUSH
37-3870	REAR BRAKE PIVOT	W3870	BRAKE PIVOT
37-3877	REAR BRAKE LEVER	W3877	BRAKE LEVER
37-3880	RETURN SPRING	W3880	SPRING
37-3890	A/FRONT WHEEL	W3890	A/FRONT WHEEL COMP
37-3891	WHEEL CPT E	W3891	RIM SPOKES & HUB
37-3892	WHEEL RIM WM2X20	W3892	RIM
37-3893	SPOKE R/H INNER	W3893	SPOKE
37-3894	SPOKE R/H OUTER	W3894	SPOKE
37-3895	SPOKE I/H	W3895	SPOKE
37-3900	A/REAR HUB	W3900	A/RIM SPOKES & HUB
37-3901	A/DISTANCE PIECE	W3901	A/OUTER DIST PIECE
37-3903	A/SPROCKET	W3903	A/53T SPROCKET
37-3913	FR BRAKE LEVER	W3913	BRAKE LEVER
37-3914	BRAKE LEVER	W3914	BRAKE LEVER
37-3921	A/SPOKE	W3921	A/LH INNER SPOKE
37-3922	A/SPOKE	W3922	A/LH OUTER SPOKE
37-3923	A/SPOKE	W3923	A/HH SPOKE
37-3925	BRAKE SHOE LEADING	W3925	BRAKE SHOE
37-3926	BRAKESHOE TRAILING	W3926	BRAKE SHOE
37-3932	DISTANCE PIECE	W3932	DISTANCE PIECE
37-3961	ADJUSTER	W3961	ADJUSTER
37-3965	WHEEL SPINDLE REAR	W3965	A/WHL SPINDLE
37-3969	BALANCE HEIGHT SHORT	W3969	A/BAL WT 1/2 OZ
37-3970	BALANCE HEIGHT LONG	W3970	A/BAL WT 1 OZ
37-3976	A/DISTANCE PIECE	W3976	A/WASHER
37-3980	A/R/W SPINDLE	W3980	A/WHEEL SPINDLE
37-3986	A/BRAKE LEVER	W3986	BRAKE LEVER REAR
37-3987	A/BRAKE LEVER	W3987	BRAKE LEVER FRONT
37-3997	BUSH	W3997	CABLE ABUTMENT BUSH
37-4014	SPRINGS	W4014	SPRING
37-4034	BRAKE LEVER	W4034	B/ LEVER
37-4049	GC72 SPRING	W4049	B/ SPRING
40-0019	STUD	E8007	C/CASE STUD
40-0020	STUD	E8008	STUD
40-0024	STUD	E8013	OIL UNION STUD
40-0025	OIL SEAL	E8025	OIL SEAL
40-0028	PEG	E3172	PEG

THE BIRMINGHAM SMALL ARMS COMPANY INCORPORATED  
COMMON PARTS COMPARISON

ART NUMBER	B S A PART DESCRIPTION	PART NUMBER	T R I U M P H PART DESCRIPTION
40-0029	STUD	E3447	STUD
40-0066	WASHER	E8038	SHIM
40-0118	KEY	E8061	KEY
40-0127	STUD	E8229	STUD
40-0133	GUIDE	E3208	VALVE GUIDE
40-0156	SPRING	E1574	WASHER
40-0157	WASHER	E1330	WASHER
40-0158	WASHER	E1575	WASHER
40-0159	WASHER	E1335	WASHER
40-0162	NUT	E1435	NUT
40-0167	COLLET ONE HALF	99-0062	SPLIT CUTTER
40-0171	COLLAR	E1543	SPRING COLLAR
40-0209	NUT	E8089	NUT
40-0210	SPROCKET	E8139	SPROCKET
40-0222	BUSH	E8150	BUSH
40-0224	STOP	T1157	STOP PLATE
40-0228	SCREW	E8171	COVER SCREW
40-0229	SCREW	E8160	SCREW
40-0234	SCREW	E8174	DRAIN SCREW
40-0235	SCREW	E8161	COVER SCREW
40-0236	SCREW	E8169	SCREW
40-0239	WASHER	NE507	PLUG WASHER
40-0242	SCREW	T1150	PLATE SCREW
40-0243	SEAL	E3833	OIL SEAL
40-0323	SEAL	E3309	O RING
40-0327	DIST PIECE	E8142	DISTANCE PIECE
40-0372	CLAMP	E4099	CLAMP
40-0375	PIPE	E8173	PIPE
40-0376	SCREW	E8126	HTN VALVE SCREW
40-0387	SPRING	E8120	SPRING
40-0394	DOWEL	E8011	DOWEL
40-0414	NUT	E8071	NUT
40-0679	SEAL	E8153	OIL SEAL
40-0682	WASHER	E8164	WASHER
40-0683	BOLT	E4747	PILLAR BOLT
40-0705	GRUMMET	E8148	GRUMMET
40-0715	PLUG	E8231	PLUG
40-0723	TUBE	E8166	C/B/LEAD SLEEVE
40-0740	WASHER	E8175	WASHER
40-0862	CIRCLIP	E8157	CIRCLIP
40-0865	STUD	E8006	STUD
40-0892	FLYWHEEL	E8036	PLUG
40-0907	INSERTS STD /PER PR/	E6068	INSERTS STD/PER 1PR/
40-0913	BOLT	E3705	BOLT
40-0916	BUSH	E40035	BUSH
40-0929	CYL HEAD	E8197	CYL HEAD
40-0931	IN VALVE GUIDE	E8225	VALVE GUIDE
40-0932	VALVE GUIDE	E8226	VALVE GUIDE
40-0933	CYLINDER HEAD GASKET	E8081	GASKET
40-0939	STUD	E8228	STUD
40-0942	STUD	E8080	STUD
40-0946	BRACKET	E8189	BRACKET
40-0955	BUSH	E8004	BUSH

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
40-0958	CAM SHAFT	E8058	CAMSHAFT C/W GEAR
40-0965	SCREW	E8086	SCREW
40-0969	WASHER	E1577	WASHER
40-0970	PISTON C/PTE	E7998	PISTON ASSY
40-0972	PISTON	E8272	PISTON ASSY
40-0974	PISTON	E8273	PISTON ASSY
40-0977	OILSEAL	E8154	OIL SEAL
40-0979	CIRCLIP	WE479	CIRCLIP
40-0993	OIL PIPE	E8107	NIPPLE
40-1005	SCREW	E8176	POINTER
40-1007	VALVE SPRINGINNER	E8115	V/SPRING INNER
40-1009	SPRING	E8114	OUTER VALVE SPRING
40-1010	PUSH ROD	E8055	PUSH ROD
40-1015	SPINDLE	E8093	PUMP SPINDLE
40-1016	GEAR	E8095	FEED GEAR
40-1018	CUP	E8113	BOTTOM CUP
40-1021	PUSH ROD	E8053	PUSH ROD
40-1031	BOLT	E8033	BOLT
40-1033	DIPSTICK	T2695	G/BOX DIP STICK
40-1034	DRAIN PLUG	T2696	PLUG
40-1035	OIL PIPE UNION	E8127	UNION
40-1037	OIL PIPE	E8106	FEED PIPE
40-2705	WASHER	S25-13	WASHER
40-2710	COLLAR	F8976	COLLAR
40-2711	BOLT	F8977	SCREW
40-2712	NUT	F8978	NUT
40-3019	WASHER	T2664	GEARBOX SPACER
40-3020	WASHER	T2678	THRUST WASHER
40-3024	BUSH	T1118	K/STARTER BUSH
40-3025	PAWL	T1281	K/S PAWL
40-3026	PLUNGER	T1282	PAWL PLUNGER
40-3028	SPRING	T1162	RETURN SPRING
40-3029	PLATE	T1163	SPRING PLATE
40-3030	RETAINER	T1274	PAWL DISC
40-3032	SPINDLE	T2688	FORK SPINDLE
40-3033	FORK	T2689	SELECTOR FORK
40-3037	WASHER	T1148	PLATE WASHER
40-3041	CAMPLATE SPINDLE	T1069	SPINDLE
40-3042	SPRING	T2691	SPRING
40-3043	SPRING BACKING	T1249	CAMPLATE SPRING
40-3044	SCREW	T1076	BOLT
40-3045	WASHER	T1180	LOCKPLATE
40-3046	COVER	T1149	INNER PLATE
40-3051	NUT	T1434	M/SHAFT NUT
40-3059	RIVET	T1277	PEG
40-3061	SPRING	T1109	RETURN SPRING
40-3064	PLUG	T1110	FILLER PLUG
40-3073	PEDAL	T1164	F/CHANGE PEDAL
40-3084	BOLT	T1169	CRANK BOLT
40-3089	WASHER	T1257	JOINT WASHER
40-3119	WASHER	T2665	GEARBOX SPACER
40-3120	SPACER	T2666	GEARBOX SPACER
40-3121	WASHER	T2702	LUCKWASHER

THE BIRMINGHAM SMALL ARMS COMPANY INCORPORATED  
COMMON PARTS COMPARISON

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
40-4960	HANDLEBAR	H2628	HANDLEBAR
40-5018	CAP	H2651	CAP
40-5029	CONE	H1140	CONE & COVER
40-5046	PLUG	H1071	DRAIN PLUG
40-5048	BOLT	H1063	BODY SCREW
40-5069	WASHER	H1062	WASHER
40-5090	CABLE CLIP	H2654	GUIDE
40-5143	CONE	H2647	TOP CONE
40-5144	HEAD RACE	H2648	BOTTOM CONE
40-5145	DUST CAP	H2650	DUST CAP
40-5190	PLUG	H2639	PLUG
40-6022	BOLT	F8991	BOLT
40-6030	BOLT	E8193	BOLT
40-6033	ADJUSTER	W2339	WHEEL ADJUSTER
40-6040	CAP	W1015	COVER PLATE
40-6790	WASHER	F9027	SPECIAL WASHER
40-6910	BOLT	F8997	BOLT
40-8046	RUBBER	F9093	BUFFER
40-8085	RUBBER	F9064	RUBBER
40-8105	BOLT	F9139	BOLT
40-8121	RUBBER	F9134	RUBBER
40-8322	OIL FEED PIPE	F3655	FEED PIPE
40-8327	SLEEVE	E3383	CUNN RUBBER
40-8331	WASHER	F1713	WASHER
40-8382	RETURN PIPE	F9224	CONNECTION
40-8401	RUBBER	F9127	RUBBER
40-8435	BOLT	F9067	BOLT
40-8436	SLEEVE	F6039	RUBBER BUSH
40-8615	CABLE	D966	CLUTCH CABLE
40-9017	SPANNER	D971	BOX SPANNER
40-9172	TOOL THAY	F9090	TOUL THAY
40-9187	BRACKET	F9094	BRACKET
40-9188	STRIP	F10253	PROTECTIVE STRIP
40-9190	CLIP	E8147	CLIP
41-0034	BOLT	E8016	BOLT
41-0143	TENSIONER	E8184	CHAIN TENSIONER
41-0146	DIST PIECE	E8143	DISTANCE PIECE
41-0325	STUD	E8026	STUD
41-0567	GEAR	E8041	GEAR
41-0569	PINION	E8040	C/SHAFT PINION
41-0603	OIL PUMP GEAR	E8094	SPINDLE GEAR
41-0604	GEAR	E8096	SCAVANGE GEAR
41-0605	GEAR	E8097	SCAVANGE
41-0606	SPINDLE	E8098	SPINDLE
41-0608	SPINDLE	E8092	HOUSING
41-0609	SCREW	E8100	SCREW
41-0620	COVER	E8064	SCAVANGE COVER
41-0624	VALVE	E8017	SCAVANGE PIPE
41-0673	KEY	E8144	KEY
41-0705	STUD	E8288	STUD
41-0706	DOWEL	E8022	DOWEL
41-0715	CABLE GROMMET	E8155	GROMMET
41-0802	STUD	E8021	STUD

THE BIRMINGHAM SMALL ARMS COMPANY INCORPORATED  
COMMON PARTS COMPARISON

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
40-4960	HANDLEBAR	H2628	HANDLEBAR
40-5018	CAP	H2651	CAP
40-5029	CONE	H1140	CONE & COVER
40-5046	PLUG	H1071	DRAIN PLUG
40-5048	BOLT	H1063	BODY SCREW
40-5069	WASHER	H1062	WASHER
40-5090	CABLE CLIP	H2654	GUIDE
40-5143	CONE	H2647	TOP CONE
40-5144	HEAD RACE	H2648	BOTTOM CONE
40-5145	DUST CAP	H2650	DUST CAP
40-5190	PLUG	H2639	PLUG
40-6022	BOLT	F8991	BOLT
40-6030	BOLT	E8193	BOLT
40-6033	ADJUSTER	W2339	WHEEL ADJUSTER
40-6040	CAP	W1015	COVER PLATE
40-6790	WASHER	F9027	SPECIAL WASHER
40-6910	BOLT	F8997	BOLT
40-8046	RUBBER	F9093	BUFFER
40-8085	RUBBER	F9064	RUBBER
40-8105	BOLT	F9139	BOLT
40-8121	RUBBER	F9134	RUBBER
40-8322	OIL FEED PIPE	F3655	FEED PIPE
40-8327	SLEEVE	E3383	CUNN RUBBER
40-8331	WASHER	F1713	WASHER
40-8382	RETURN PIPE	F9224	CONNECTION
40-8401	RUBBER	F9127	RUBBER
40-8435	BOLT	F9067	BOLT
40-8436	SLEEVE	F6039	RUBBER BUSH
40-8615	CABLE	D966	CLUTCH CABLE
40-9017	SPANNER	D971	BOX SPANNER
40-9172	TOOL THAY	F9090	TOUL THAY
40-9187	BRACKET	F9094	BRACKET
40-9188	STRIP	F10253	PROTECTIVE STRIP
40-9190	CLIP	E8147	CLIP
41-0034	BOLT	E8016	BOLT
41-0143	TENSIONER	E8184	CHAIN TENSIONER
41-0146	DIST PIECE	E8143	DISTANCE PIECE
41-0325	STUD	E8026	STUD
41-0567	GEAR	E8041	GEAR
41-0569	PINION	E8040	C/SHAFT PINION
41-0603	OIL PUMP GEAR	E8094	SPINDLE GEAR
41-0604	GEAR	E8096	SCAVANGE GEAR
41-0605	GEAR	E8097	SCAVANGE
41-0606	SPINDLE	E8098	SPINDLE
41-0608	SPINDLE	E8092	HOUSING
41-0609	SCREW	E8100	SCREW
41-0620	COVER	E8064	SCAVANGE COVER
41-0624	VALVE	E8017	SCAVANGE PIPE
41-0673	KEY	E8144	KEY
41-0705	STUD	E8288	STUD
41-0706	DOWEL	E8022	DOWEL
41-0715	CABLE GROMMET	E8155	GROMMET
41-0802	STUD	E8021	STUD

THE BIRMINGHAM SMALL ARMS COMPANY INCORPORATED  
COMMON PARTS COMPARISON

PAGE 15

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
41-2725	SILENCER	E9143	SILENCER
41-3045	BUSH	T2753	HIGH GEAR BUSH
41-3054	SEAL	E8015	M/SHAFT O/SEAL
41-3063	M/SHAFT GEAR	T2662	MAINSHAFT 3RD GEAR
41-3068	L/S&GEAR	T2667	LAYSHAFT
41-3070	PINION 22T	T2668	L/S 2ND GEAR
41-3072	WASHER	T2672	WASHER
41-3074	WASHER	T2671	WASHER
41-3078	CIRCLIP	T2669	CIRCLIP
41-3089	PINION 16T	T2663	MAINSHAFT LOW GEAR
41-3094	G/BOX SPROCKET	T2765	SPROCKET 15T
41-3095	SPROCKET 16T	T2701	SPROCKET 16T
41-3209	SPIDER	T2715	SPIDER
41-3210	CENTER	T2724	CLUTCH CENTRE
41-3212	HUBBER	T2723	RUBBER
41-4105	NUT 3/8	F9085	NUT
41-5124	TUBE	H2660	TUBE
41-5134	VALVE SEAT	H2667	VALVE SEAT
41-5135	FORK CIRCLIP	H2662	CIRCLIP
41-5138	BOLT	H2663	BOLTS
41-5139	DAMPER VALVE	H2666	VALVE
41-5140	DAMP VALVE	H2665	COLLAR
41-5141	BOLT	H2634	PLUG
41-5143	CIRCLIP	H2664	BUSH CIRCLIP
41-5144	BUSH	H2661	TUBE BUSH
41-5145	WASHER	H2668	WASHER
41-5146	NUT	H2652	NUT
41-6016	BEARING	H2298	HUB BEARING
41-6017	BEARING	H2310	BEARING
41-6019	DIST COLLAR	H2306	COLLAR
41-6021	RING	H2303	RING
41-6032	SPINDLE	H2308	FIXED SPINDLE
41-6073	BRAKE SHOE	H1406	BRAKE SHOE
41-6076	BRAKESHOE	H1407	BRAKE SHOE
41-6078	PAD	H1415	PIVOT PAD
41-6082	COLLAR	H2307	COLLAR
41-6090	DRUM	H2318	BRAKE DRUM
41-6091	REAR SPROCKET 49T	H2321	SPROCKET
41-6093	PLATE	H2322	PLATE
41-6094	STRAP	H2335	STRAP
41-6098	SPINDLE	H2333	HUB SPINDLE
41-7007	PIN	F9032	BRAKE PEDAL PIN
41-7008	B/PEDAL STOP	F9037	STOP
41-7039	BRAKE ROD	F9036	BRAKE ROD
41-7713	CHAINGUARD	F9059	CHAINGUARD
41-8312	ELBOW OIL FILTER	41-8312	ADAPTER
41-8313	NUT	41-8313	NUT
41-8314	WASHER OIL FILTER IN	41-8314	WASHER
41-8316	NUT OIL FILTER	41-8316	NUT
41-8317	CONNECTIONS TUBE	41-8317	CON TUBE
42-3183	SCREW	T1040	SCREW
42-3187	PLATE	T1044	OUTER PLATE
42-3189	STUD	T423A	SPRING PIN

THE BIRMINGHAM SMALL ARMS COMPANY INCORPORATED  
COMMON PARTS COMPARISON

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
42-3191	WASHER	T1046	TAB WASHER
42-3199	NUT	T427	NUT
42-3201	RUBBER	T1473	REBOUND RUBBER
42-3202	RUBBER	T1472	DRIVE RUBBER
42-3206	CLUTCH ROLLER	T394	CLUTCH ROLLER
42-3235	CLUTCH CENTRE	T872	CLUTCH CENTRE
42-3236	WASHER	T524	WASHER
42-3237	WASHER	T420	WASHER
42-3249	NUT	F9068	NUT
42-4343	NUT	F8995	NUT
42-4364	WASHER	F8996	WASHER
42-4475	NUT	E8194	NUT
42-4925	RUBBER	F9051	RUBBER
42-4926	FOOT REST	F9043	FOLDING FOOTREST
42-5084	BOLT	H2629	BOLT 1 7/16
42-5811	SPOKE	W1236	SPOKE
42-5812	NIPPLE	S79-2	SPOKE NIPPLE
42-5830	CAM	W1243	BRAKE CAM
42-5836	PIN	W132	CLEVIS PIN
42-5841	SPRING	W135	RETURN SPRING
42-5842	NUT	W1246	SPINDLE NUT
42-6011	SPOKE	W2292	SPOKE
42-6012	SPOKE	W2293	SPOKE
42-6019	FLANGE	W2314	FLANGE
42-6045	LEVER	W2329	LEVER
42-6335	RING	W582	RING
42-6371	REAR WHEEL RIM	W2291	RIM
42-6554	BOLT	T2703	BOLT
42-8017	RUBBER	F10260	MOUNTING RUBBER
42-8052	RUBBER	F9062	RUBBER
47-3214	CLUTCH C/WHEEL	T2716	CLUTCH HOUSING
47-4214	S/ARM SPINDLE	F8994	S/ARM SPINDLE
47-5064	WASHER	H2632	WASHER
47-5065	WASHER	H2633	WASHER
47-6806	BRACKET	F9198	BRACKET
47-7003	BOLT	F9040	ADJUSTER
47-7013	R/BRAKE PEDAL	F9031	R/BRAKE PEDAL
47-9010	CLIP	F9084	CLIP
47-9030	CLIP	E9122	CABLE CLIP
54-0022	WASHER	S26-2	WASHER
54-0055	WASHER	S25-3	WASHER
54-0170	WASHER	G5299	WASHER
54-4302	FIBRE WASHER	W1170	PLUG WASHER
54-4306	NUT	S1-52	NUT
54-4307	WASHER	S25-2	WASHER
54-5504	WASHER	F4299	WASHER
54-8003	SPRING WASHER	S26-3	WASHER
54-9012	SCREW	F4715	PANEL SCREW
54-9081	WASHER	S25-1	WASHER
57-0023	BUSH	T23	AXLE BUSH
57-0031	SPRING	T31	SPRING
57-0047	PIN	T47	PEG
57-0280	CIRCLIP	T280	CIRCLIP

THE BIRMINGHAM SMALL ARMS COMPANY INCORPORATED  
COMMON PARTS COMPARISON

PAGE 17

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
57-0291	SELECT-FORK-END	T291	FORK ROD
57-0397	QUADRANT	T397	QUADRANT
57-0404	SPRING	T404	RETURN SPRING
57-0405	SPRING	T405	SPRING
57-0406	PLUNGER	T406	PLUNGER
57-0407	GUIDE PLATE	T407	GUIDE PLATE
57-0412	BUSH	T412	SPINDLE BUSH
57-0730	A/PINION	T730	PINION
57-0731	RATCHET	T731	HATCHET
57-0732	WASHER	T2240	WASHER
57-0913	FORK	T913	SELECTOR FORK
57-0928	BUSH	T928	LOW GEAR BUSH
57-0948	WASHER	T948	WASHER
57-0955	GEAR	T955	M/SHAFT 2ND
57-0961	GEAR	T961	L/SHAFT L/GEAR
57-0963	GEAR	T963	L/SHAFT 2ND
57-1016	SCREW	T1016	SCREW
57-1167	B/SPRING	T1167	CRANK SPRING
57-1179	GEAR	T1179	M/SHAFT 3RD
57-1250	SPRING	T1250	SPRING
57-1272	KICKSTART PEDAL	T1272	K/S PEDAL
57-1370	HI GEAR BUSH	T1370	HI GEAR BUSH
57-1391	B/BUSH	T1391	M/SHAFT BUSH
57-1395	B/BUSH	T1395	SPINDLE BUSH
57-1396	B/PLUNGER	T1396	GEAR PLUNGER
57-1436	B/SPRING	T1436	PLUNGER SPRING
57-1474	B/PEG	T1474	ANCHOR PIN
57-1478	B/OIL SEAL	T1478	OIL SEAL
57-1607	WASHER	T1607	THRUST WASHER
57-1645	ADAPTOR	T1645	ADAPTOR
57-1710	B/SHAFT	T1710	LEVER SHAFT
57-1712	SPRING	T1712	LEVER SPRING
57-1715	SPROCKET	T1715	SPROCKET 19T
57-1719	CLUTCH CENTRE	T1719	CLUTCH CENTER
57-1877	B/SPRING	T1877	RETURN SPRING
57-1878	B/DISC	T1878	SPRING BUTTON
57-1896	SPINDLE	T1896	GEAR SPINDLE
57-1916	SPROCKET 17T	T1916/17	17T SPROCKET
57-1918	SPROCKET	T1918/19	SPROCKET 19T
57-1955	OIL SEAL HOUSING	T1955	SEAL HOUSING
57-1956	OIL SEAL	T1956	OIL SEAL
57-1962	WASHER	T1962	SLEEVE WASHER
57-1963	SLEEVE	T1963	PINION SLEEVE
57-2056	B/TAB WASHER	T2056	LOCK WASHER
57-2116	LOCK WASHER	T2116	LOCK WASHER
57-2166	ROCKER BOX CAP	T2166	FILLER CAP
57-2169	K/S QUADRANT	T2169	K/S QUADRANT
57-2170	PINION	T2170	K/S PINION
57-2172	PLUNGER BUSH	T2172	PLUNGER BUSH
57-2173	CRANK	T2173	K/S CRANK
57-2174	M SHAFT ASSY	T2174	MAINSHAFT ASSY
57-2176	HIGH GEAR	T2176	M/S HIGH GEAR
57-2214	WASHER	T2214	CLUTCH WASHER

PART NUMBER	U S A PART DESCRIPTION	PART NUMBER	T R I U M P H PART DESCRIPTION
57-2215	WASHER	T2215	THRUST WASHER
57-2220	ABUTMENT	T2220	CLUTCH CABLE ABUT
57-2245	SPRUCKET	T2245	CLUTCH SPROCKET
57-2252	PLATE	T2252	RETAINER PLATE
57-2259	PLUG	T2259	DRAIN PLUG
57-2330	PEDAL RUBBER	T2330	K/S RUBBER
57-2331	ARM RUBBER	T2331	ARM RUBBER
57-2438	GEAR	T2438	M/SHAFT ASSY
57-2465	PLATE	T2465	THRUST PLATE
57-2471	CLUTCH SPIDER	T2471	SPIDER
57-2473	SPRING	T2473	PLATE SPRING
57-2474	WASHER	T2474	TAB WASHER
57-2478	SPACER	T2478	SPACER
57-2479	SLEEVE	T2479	SHAFT SLEEVE
57-2480	NUT	T2480	NUT
57-2526	CL SPRING NUT	T2526	NUT
57-2538	CLUTCH SPIDER	T2538	SPIDER
57-2547	LEVER ASSEMBLY	T2547	CLUTCH LEVER
57-2551	COVER	T2551	INSP COVER
57-2552	PULL ROD	T2552	PULL ROD CL/RLS
57-2553	NUT	T2553	SLEEVE NUT
57-2554	COVER	T2554	CLUTCH COVER
57-2555	COVER	T2555	DUST COVER
57-2557	TUBE	T2557	COVER TUBE
57-2580	HUB	T2580	CLUTCH HUB
57-2595	ROLLER	T2595	ROLLER
57-2596	FORK	T2596	SELECTOR FORK
57-2641	OILSEAL	T2641	OIL SEAL
57-2642	BUSH	T2642	BUSH
57-2652	K/S CRANK	T2652	K/S CRANK
57-2750	CLUTCH LEVER	T2750	CLUTCH LEVER
57-2764	K/S CRANK MARKED USA	T2764	KICKSTART CRANK
57-2776	SPRUCKET	T2776	G/B SPROCKET 14T
57-3610	BLADE ASSEMBLY	T3610	TENSIONER BLADE
57-3614	PIN	T3614	PIVOT PIN
57-3615	ROD	T3615	TIE ROD
57-3617	NUT	T3617	ADJUSTER NUT
57-3618	SPRING	T3618	TENSIONER SPRG
57-3619	PLUG	T3619	PLUG
57-3620	O RING	T3620	PLUG O RING
57-3629	B/CLUTCH LEVER ASSY	T3629	CLUTCH LEVER
57-3632	KICKSTART CRANK	T3632	FOLDING K/STARTER
57-3634	OIL SEAL	T3634	OIL SEAL
57-3638	DIST PIECE	T3638	DISTANCE PIECE
57-3641	PRIMARY CHAIN CASE	T3641	INNER COVER
57-3642	SEAL	T3642	OIL SEAL CL/SHFT
57-3643	NEEDLE RACE	T3643	NEEDLE RACE
57-3644	OIL SEAL	T3644	OIL SEAL
57-3646	THRUST RACE	T3646	THRUST RACE
57-3647	BEARING	T3647	BEARING
57-3661	SPRING	T3661	SPRING
57-3673	WASHER	GS127	WASHER
57-3727	STOP	T3727	QUADRANT STOP

PART NUMBER	B S A PART DESCRIPTION	PART NUMBER	T R I U M P H PART DESCRIPTION
57-3733	SEALING RING	T3733	SEALING RING
57-3756	ADAPTOR	T3756	BREATHER ADAPTOR
57-3757	GEAR CHANGE PEDAL	T3757	PEDAL
57-3761	B/THRUST PLATE	T3761	THRUST PLATE
57-3762	ADAPTOR	T3762	ABUTMENT
57-3763	PIN	T3763	PIN
57-3764	PIN	T3764	PIN
57-3785	BUSHING	T3785	BUSH
57-3850	CAMPLATE	T3850	CAMPLATE
57-3854	SELECTOR FORK	T3854	SELECTOR FORK
57-3857	GEAR	T3857	MAINSHAFT 2ND GEAR
57-3858	GEAR	T3858	MAINSHAFT
57-3860	L/SHAFT GEAR	T3860	L/SHAFT 3RD GEAR
57-3861	GEAR	T3861	L/SHAFT 2ND GEAR
57-3862	GEAR	T3862	L/SHAFT LOW GEAR
57-3872	M/SHAFT GEAR	T3872	MS HI GEAR
57-3874	L SHAFT GEAR	T3874	LS LOW GEAR
57-3876	M/SHAFT GEAR	T3876	GEAR
57-3877	L/SHAFT GEAR	T3877	GEAR
57-3889	MAINSHAFT 3RD GEAR	T3889	M/SHAFT 3RD GEAR 23T
57-3890	LAYSHAFT 3RD GEAR	T3890	L/SHAFT 3RD GEAR 21T
57-3929	CLUTCH HUB	T3929	HUB CLUTCH
57-3931	WASHER	T3931	THRUST WASHER
57-3940	BOLT	T3940	SCREW
57-3941	WASHER	T3941	WASHER
57-3951	CUP	T3951	CUP
57-3954	INSPECTION COVER	T3954	INSPECTION COVER
57-3958	O/PRIMARY CASE	T3958	O/PRIMARY CASE
57-3978	WASHER	T3978	WASHER
57-3983	TIE ROD	T3983	TIE ROD
57-3986	C/TENSIONER	T3986	EYE BOLT
57-3987	WASHER	T3987	WASHER
57-3989	A/SPINDLE	T3989	SELECTOR SPINDLE
57-4004	PLATE	T4004	PLATE
57-4019	CLUTCH PRESSURE PLTE	T4019	PRESSURE PLATE
57-4051	LOCKNUT ASSY	T4051	LOCK NUT
57-4054	O RING	T4054	O RING
57-4055	CAMPLATE	T4055	CAMPLATE
57-4059	SPRING	T4059	PLUNGER SPRING
57-4070	K/S SPINDLE	T4070	KS SPINDLE
57-4113	A/CIRCLIP	T4113	CIRCLIP
57-4121	CLUTCH SPRING CUP	T4121	CLUTCH CAP
57-4155	L/SHAFT ASSY	T4155	L/SHAFT C/W H GEAR
57-4163	L/S LOW GEAR 28T	T4163	A/ L/S LO GEAR 28T
57-4166	A/LSHFT 2ND GEAR	T4166	A/ L/S 2NDGEAR
57-4168	A/LSHFT 3RD GEAR	T4168	A/ L/S 3RDGEAR
57-4169	A/MSHFT 3RD GEAR	T4169	A/ M/S 3RDGEAR 23T
57-4175	MAINSHAFT ASSY	T4175	A/ M/S C/W LO GEAR
57-4186	CLUTCH CENTRE	T4186	CENTRE
57-4189	CLUTCH ADJ SCREW	T4189	SCREW
57-4198	CLUTCH CHAINWHEEL	T4198	CHAINWHEEL
57-4200	CLUTCH HUB	T4200	CLUTCH HUB
57-4225	CLUTCH SPROCKET	T4225	A/50T CLUTCH SPROCKT

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
57-4227	BUSHING	T4227	HOUSING
57-4288	A/SPRING	T4288	LEAF SPRING
57-4289	A/SUPPORT	T4289	SUPPORT PLATE
57-4290	A/PLATE	T4290	PLATE
57-4291	A/TAB WASHER	T4291	TAB WASHER
57-4307	A/SELECTOR FORK	T4307	L/S SEL FORK
57-4308	A/SELECTOR FORK	T4308	SELECTOR FORK
57-4323	CLUTCH ASSEMBLY	T4323	A/SPIDER
57-4338	K/S SPRING	T4338	K/S SPRING
57-4342	QUADRANT STOP	T4342	KICKSTART STOP
57-4343	MAINSHAFT LOCKWASHER	T4343	LUCKWASHER
57-4344	G/B M/S	T4344	M/ SHAFT
57-4345	L/S W/HI GEAR	T4345	LAYSHAFT C/W HIGH
57-4360	5SPD A/CAMPLATE	T4360	5SPD A/G/BOXCAMPLATE
57-4363	5SPD A/QUADRANT	T4363	5SPD A/G/BOX QUAD
57-4364	5SPD A/SELECTOR FORK	T4364	5SPDA/SELFK M/S 4GR
57-4366	5SPD A/SELECTOR FORK	T4366	5SPDA/SELFK L/S 3GR
57-4368	5SPD A/SELECTOR FORK	T4368	5SPDA/SELFK L/S 1GR
57-4370	5SPD A/MAINSHAFT	T4370	5SPDA/MAINSHAFT
57-4374	A/QUADRANT	T4374	A/PLUNGER QUADRANT
57-4376	5SPD A/M/S 4TH GEAR	T4376	5SPDA/M/S 4TH GEAR
57-4377	5SPD A/M/S 3RD GEAR	T4377	5SPDA/M/S 3RD GEAR
57-4380	5SPD A/M/S 1-2 GEAR	T4380	5SPDA/M/S 1-2 GEAR
57-4381	5SPD A/DRIVING DOG	T4381	5SPD A/DRIVING DOG
57-4386	5SPD A/BUSH	T4386	5SPD A/BUSH
57-4387	5SPD A/L/S 3RD GEAR	T4387	5SPD A/L/S 3RD GEAR
57-4388	5SPD A/L/S 2ND GEAR	T4388	5SPD A/L/S 2ND GEAR
57-4390	5SPD A/BUSH	T4390	5SPD A/BUSH
57-4391	5SPD A/L/S 1ST GEAR	T4391	5SPD A/L/S 1ST GEAR
57-4393	5SPD A/BUSH	T4393	5SPD A/BUSH
57-4394	5SPDA/OILSEALHOUSING	T4394	5SPDA/OILSEALHOUSING
57-4395	5SPD A/LOCKWASHER	T4395	5SPD A/LOCKWASHER
57-4396	A/NUT	T4396	A/LOCKNUT
57-4397	5SPD A/GB SPKT 19T	T4397	5SPD A/GB SPKT 19T
57-4402	5SPD A/LEAF SPRING	T4402	B/SPRING
57-4403	5SPD A/PLUNGER	T4403	5SPD A/PLUNGER
57-4441	B/CLUTCH LEVER	T4441	B/CLUTCH LEVER
57-4548	LAYSHAFT ASSY	T4548	LAYSHAFT ASSY
60-0291	B/TOUL ROLL	D291	TOUL ROLL
60-0702	CLIP	U702	OIL PIPE CLIP
60-0767	BLADE	0767	SCREWDHIVER
60-0779	TOOL	U779	FORK WRENCH
60-0782	TOOL	0782	CAM EXTRACTOR
60-0801	LEVER	U801	TYRE LEVER
60-1053	AIR CLEANER	D1053	AIR CLEANER
60-1810	TOOL	U1810	OIL SEAL PROTECTOR
60-1832	CUTTER	D1832	VALVE SEAT CUTTER
60-1833	CUTTER	D1833	VALVE SEAT CUTTER
60-1835	TOUL	D1835	SEAT BLENDING CUTTE
60-1836	CUTTER	U1836	SEAT BLENDING CUTTE
60-1841	A/GREASE NIPPLE	D1841	GREASE NIPPLE
60-1858	TOOL	U1858	TIMING PLUG/BODY
60-1860	TOOL	D1860	HUB EXTRACTOR

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
60-1862	USE D1862	D1862	HUB EXTRACTOR
60-1863	PILOT ASSY	D1863	ARBOR & PILOT SET
60-1865	TOOL	D1865	CARB SPRING COMP
60-1907	SPANNER	D1907	RING SPANNER
60-1908	SPANNER	D1908	BOX SPANNER
60-1909	SPANNER	D1909	SPANNER
60-1910	SPANNER	D1910	PLUG SPANNER
60-1911	TOMMY BAR	D1911	TOMMY BAR
60-1912	TOOL KIT CPTC	D1912	TOOL KIT
60-2020	SPANNER	D2020	SPANNER
60-2045	OIL SWITCH COVER	D2045	COVER
60-2076	FR BRAKE CABLE	D2076	BRAKE CABLE
60-2077	BRAKE CABLE	D2077	BRAKE CABLE
60-2084	SPANNER	D2084	OPEN SPANNER
60-2086	SWITCH COVER	D2086	COVER FOR SWITCH
60-2087	CHECKWIRE ASSY	D2087	CHECK WIRE
60-2113	TOOL KIT CPTC	D2113	TOOL KIT TR25
60-2114	TOOL KIT CPTC	D2114	TOOL KIT
60-2184	C SPANNER	D2184	C SPANNER
60-2195	PLUG BODY	D2195	TUC TOOL
60-2211	TOOL	D2211	C/CASE BAFFLE FRONT
60-2212	TOOL	D2212	REAR C/CASE BAFFLE
60-2213	TOOL	D2213	PINNION SET
60-2221	TOOL	D2221	OIL SEAL COMP
60-2251	SPANNER	D2251	RING SPANNER
60-2320	WASHER	D2320	WASHER
60-2321	WASHER	D2321	WASHER
60-2322	WASHER	D2322	WASHER
60-2329	WASHER	D2329	WASHER
60-2330	A/WASHER	D2330	WASHER
60-2331	WASHER B/LEVER	D2331	WASHER
60-2332	WASHER	D2332	WASHER
60-2333	WASHER	D2333	WASHER
60-2335	WASHER	D2335	WASHER
60-2336	WASHER	D2336	WASHER
60-2338	WASHER	D2338	WASHER
60-2339	WASHER	D2339	WASHER
60-2340	WASHER	D2340	A/WASHER
60-2347	WASHER TOOL TAY	D2347	WASHER
60-2348	WASHER	D2348	WASHER
60-2381	SCREW	D2381	SCREW
60-2391	WASHER	D2391	WASHER
60-2417	WASHER	D2417	WASHER
60-2418	SPRING WASHER	D2418	WASHER
60-2426	WASHER	D2426	WASHER
60-2427	WASHER	D2427	WASHER
60-2428	SPRING WASHER	D2428	WASHER
60-2431	A/WASHER	D2431	A/WASHER
60-2438	SPRING WASHER	D2438	SPRING WASHER
60-2445	CLUTCH CABLE	D2445	CL CABLE
60-2594	GROMMET	D2594	GROMMET
60-2600	MOUNTING RUBBER	D2600	CUP
60-2601	AIR CLEANER ELEMENT	D2601	ELEMENT

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
60-2630	RUBBER GROMMET	U2630	GRUMMET
60-2632	BEARING CIRCLE	U2632	CIRCLIP
60-2639	O RING BRAKE CAM	U2639	O RING
60-2647	END SPANNER	U2647	A/OPEN END SPANNER
60-2724	SPLIT PIN	U2724	SPLIT PIN
60-3065	SLEEVE	U3065	SLEEVE
60-3072	ELEMENT	U3072	ELEMENT
60-3143	FR BRAKE LEVER	U3143	FR BRAKE LEVER
60-3144	LEVER	U3144	CLUTCH LEVER
60-3148	PROTECTOR	U3148	GAITER
60-3152	GAITER	U3152	GAITER
60-3159	ODDIE FASTENER	U3159	FASTNER
60-3160	RUBBER WASHER	U3160	WASHER
60-3161	GROMMET	U3161	GRUMMET
60-3242	MUDGUARD GROMMET	U3242	GRUMMET
60-3246	LEVER AIR CONTROL	U3246	AIR LEVER
60-3291	GROMMET	U3291	GRUMMET
60-3310	HOSE CLIP	U3310	CLIP
60-3313	NUT	U3313	NUT
60-3350	SPANNER	U3350	OPEN SPANNER
60-3351	TOOL KIT	U3351	TOOL KIT
60-3398	A/WASHER	U3398	WASHER
60-3494	A/CIRCLIP	U3494	A/CIRCLIP
60-3510	A/OIL SEAL	U3510	A/OIL SEAL
60-3530	O RING	U3530	A/O RING
60-3536	JUBILEE CLIP	U3536	A/CLIP
60-3539	A/SCREW	U3539	SCREW
60-3541	B/WASHER	U3541	GC/SPRING WASHER
60-3548	O RING	U3548	O RING
60-3550	SCREW	U3550	SCREW
60-3552	A/BEARING	U3552	71 BEARING M/S
60-3556	A/BEARING	U3556	71 BEARING HIGEAR
60-3583	LEVER FRONT BRAKE	U3583	HANDLEBAR BRK LEVER
60-3616	GC72 WASHER	U3616	O RING
60-3657	A/LEVER	U3657	CLUTCH LEVER
61-3005	TOOL	61-3005	TOOL
61-3007	TOOL	61-3007	TOOL
61-3350	TOOL	61-3350	TOOL
61-3583	EXTRACTOR	61-3583	EXTRACTOR
61-3682	SLIPPERS SET OF TWO	61-3682	TOOL
61-3694	TOOL	61-3694	TOOL
61-3773	TOOL	61-3773	GEARPULLER 250CC
61-3774	TOOL	61-3774	TOOL
61-3809	WEIGHT SET 2 HALVES	61-3809	CHECK WEIGHT
61-3816	TOOL	61-3816	C/B PULLER
61-3824	TOOL	61-3824	FORK LEG TOOL
61-5035	TOOL	61-5035	VALVE SUCTION CUP
61-6002	TOOL	61-6002	ENG LIFT ATTACHMENT
61-6008	TOOL	61-6008	T GUIDE PUNCH
61-6010	REAMER	61-6010	HIGH GEAR REAMER
61-6016	PUNCH ADAPTOR	61-6016	ADAPTOR TAPPET GUIDE
61-6017	TOOL	61-6017	FORK NUT SPANNER
61-6019	TOOL	61-6019	PINION EXTRACTOR

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
61-6021	TOOL	61-6021	BEARING DRIFT D/S
61-6024	TOOL	61-6024	C/SHAFT PINION
61-6026	TOOL	61-6026	BEARING DRIFT
61-6042	TOOL	61-6042	GAUGE
61-6046	TOOL	61-6046	C/CASE PTG TOOL 750
61-6050	TOOL	61-6050	SWING ARM BRUSH TOOL
61-6051	TOOL	61-6051	OIL SEAL PROTECTOR
61-6059	TOOL	61-6059	TAPPET BLK DRILL JIG
61-6061	SPANNER	61-6061	G/BOX SPKT SPANNER
61-6062	SPANNER	61-6062	BRKT PLATE NUT SPANN
61-6063	PUNCH	61-6063	VALVE GUIDE
61-6070	HUB HOLDING TOOL	61-6070	CLUTCH HUB TOOL
61-6103	SPROCKET LOCATE TOOL	61-6103	SPRUCKET LOCATE TOOL
61-6104	CLUTCH PULL ROD TOOL	61-6104	CLUTCH PULL ROD TOOL
61-6105	SPROCKET ALIGN TOOL	61-6105	ALIGN. GAUGE
61-6113	DAMP,RMV.TOOL	61-6113	DAMP,RMV.TOOL
62-0263	CLIP	E8111	CLIP
622/113	SCREW	D1960	ROD SPRING
622/115	RETAINING CAP	D1959	TOP SPRG ABUTMENT
64-6016	NUT	H2646	NUT
65-1232	FLANGE GASKET	E8136	GASKET
65-4917	BOLT	F9044	BOLT
65-5332	WASHER	H2653	WASHER
65-5333	CLIP	H2655	CLIP
65-5424	FORK BUSH	H2637	TOP BEARING
65-5451	SEAL	H2641	OIL SEAL
65-5883	BEARING	W2363	BEARING
65-5884	WASHER	W2299	WASHER
65-5886	WASHER	W2301	WASHER
65-5887	RING	W2302	RING
65-5904	SPRING	W2328	RETURN SPRING
65-5940	BRAKE SHOE	W2327	BRAKE SHOE
65-6274	PIN	F9038	PIN
65-8326	BOLT	F9086	BOLT
66-3074	DOWEL	E8010	DOWEL
66-4149	CUP	F8988	CUP
66-4707	WASHER	E8191	BRACKET WASHER
66-4708	WASHER	W2331	WASHER
66-8340	PIPE CLIP	D981	A/VENT PIPE CLIP
67-0042	WASHER	F9076	WASHER
67-1171	BOLT	W2336	BOLT
67-1236	DOWEL	E8009	DOWEL
67-1391	PLATE	E8099	PLATE
67-1498	WASHER	E8121	WASHER
67-6027	SLEEVE	W2300	SPINDLE SLEEVE
67-6033	WASHER	W2311	BEARING SHIM
67-6034	RING	W2312	SPRING RING
67-6038	BOLT	W2315	BOLT
67-6051	WASHER	W2313	H/SHELL WASHER
67-6839	GROMMET	F9028	GROMMET
67-8313	SCREW	F9029	BOLT
67-9026	SPANNER	D972	RING SPANNER
68-0022	BUSH	E3824	BUSH

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
68-0024	CIRCLIP	E489	CIRCLIP
68-0027	SEAL	T946	OIL SEAL
68-0101	SPRING	T373	SPRING
68-0130	BREATHER	E3822	DISC
68-0131	VALVE	E2254	ROTARY VALVE
68-0132	SPRING	E2256	VALVE SPRING
68-0184	PLUG	E3905	CRANK PLUG
68-0185	OIL TUBE	E3903	OIL TUBE
68-0209	OIL SEAL	E4144	GRUMMET
68-0216	SCREW	E4096	SCREW
68-0331	WASHER	S25-43	WASHER
68-0331	WASHER	E8163	WASHER
68-0383	UNION	E8179	CHAIN OILER
68-0582	WASHER	E8037	WASHER
68-0661	INLET VALVE	E8112	IN VALVE
68-0938	WASHER	E8104	WASHER
68-3027	BUSH	T3988	BUSH CLUTCH ROD
68-3203	A/PEDAL	T2774	K/S PEDAL
68-3218	KEY	S66-1	KEY
68-3264	CL CABLE GROMMET	T1646	RUBBER COVER
68-3277	CLUTCH-HUB	T1734	CLUTCH HUB
68-3280	PLATE	T1720	INNER PLATE
68-3281	RUBBER	T1722	DRIVE RUBBER
68-3282	RUBBER	T1723	REBOUND RUBBER
68-3283	PLATE	T1724	OUTER PLATE
68-3287	CLUTCH-CUP	T1931	SPRING CUP
68-3305	PRESSURE PLATE	T2156	PLATE ASSY
68-3308	ADJUSTER	T2159	ADJUSTER
68-4081	BOLT	F9045	BOLT
68-4577	STRAP	F9005	STRAP
68-4597	RUBBER	F8091	BATT TRAY
68-4606	O RING	F9001	O RING
68-4631	CLIP	F6074	CLEANER CLIP
68-4835	FOOTREST	F9053	PEDAL
68-5056	BOLT	H2656	BOLT
68-5108	SPACER	H2631	SPACER WASHER
68-5134	SPACER	H2643	SPACER
68-5137	BRACKET	H2658	BRACKET
68-5143	DAMPER ROD	H2669	ROD
68-5144	FR FORK SHAFT	H2636	FORK SHAFT
68-5170	WASHER	H2670	WASHER
68-5171	WASHER	H2671	WASHER RING
68-5197	WASHER	H2635	WASHER
68-6081	L/RING	W2305	RING
68-6095	BOLT	W2319	BOLT
68-6100	NUT	W2309	NUT
68-6133	FULCRUM PIN	W2323	PIN
68-6134	USE 37-4001	W2334	SPRING
68-6135	STRIP	W2317	RING
68-6142	COVER	W2304	END COVER
68-6906	TUBE	F9140	SPACER
68-6906	TUBE	F10250	DISTANCE TUBE
68-8368	FILLER CAP	F9075	OIL FILLER CAP

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
68-8382	CLIP	F9073	CLIP
68-8383	OIL PIPE	F9146	PIPE
68-9153	CLIP	F6136	RETAINER CLIP
68-9163	BATT VENT PIPE	D980	VENT PIPE
68-9223	STUD	D982	STUD
68-9225	WASHER	D983	STUD RUBBER
68-9226	WASHER	D984	RUBBER
68-9287	STUD	D1006	STUD
68-9351	CLIP	H2034	H/BAR CLIP
68-9462	SPANNER	D968	SPANNER
68-9467	KEY	D974	TYRE VALVE KEY
70-0402	WASHER	E402	WASHER
70-1523	WASHER	E1523	WASHER
70-1532	DONEL	E1532	DOWEL
70-1558	KEY	E1558	KEY
70-1580	KEY TIMING PINION	E1580	KEY
70-1591	MAIN BEARING	E1591	BEARING
70-1670	WASHER	E1670	WASHER
70-2441	B/WASHER	E2441	WASHER
70-2968	INSUL.BLOCK	E2968	INSULATING BLOCK
70-2980	STUD	E2980	STUD
70-3209	B/CIRCLIP	E3209	CIRCLIP
70-3716	B/DOWEL	E3716	DOWEL
70-3751	WASHER	E3751	WASHER
70-3821	B/SCREW	E3821	SCREW
70-3851	B/WOODRUFF KEY	E3851	KEY
70-3885	B/JET	E3885	METERING JET
70-3974	KEY	E3974	C/SHAFT KEY
70-3975	B/LOCKWASHER	E3975	TAB WASHER
70-4562	PINION	E4562	CAM PINION
70-4576	SLEEVE CARB TO GROMM	E4576	CARB ADAPTOR
70-4705	CLIP	E4705	TUBE CLIP
70-4746	CUP	E4746	BOTTOM CUP
70-4752	SEALING RUBBER	E4752	WASHER
70-4803	O RING SPINDLE L 17	E4803	O RING
70-5324	NUT	E5324	NUT
70-5874	EX PIPE CLIP	E5874	CLIP
70-5977	TRUNNION	E5977	TRUNNION
70-5998	INSERTS STD /PER PR/	E5998	B/END BEARING /PR/
70-6018	BUSH	E6018	SPINDLE BUSH
70-6023	INSERTS STD /PER PR/	E6023	M/BEARING SHELL /PR
70-6025	CIRCLIP	E6025	BEARING CIRCLIP
70-6026	CIRCLIP	E6026	CIRCLIP
70-6030	SPINDLE	E6030	SPINDLE
70-6038	FEED GEAR	E6038	GEAR
70-6039	GEAR	E6039	GEAR
70-6061	CHAIN TENSIONER	E6061	TENSIONER BLADE
70-6088	WASHER	E6088	WASHER
70-6124	HOUSING	E6124	BUSH
70-6130	SPRING	E6130	FILTER SPRING
70-6131	GASKET	E6131	GASKET
70-6173	DISTANCE PIECE	E6173	PINION SPACER
70-6353	TUBE	E6353	CUNNECTION

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
70-6420	VALVE GUIDE	E6420	VALVE GUIDE
70-6422	INLET VALVE	E6422	INLET VALVE
70-6423	EX VALVE	E6423	EX VALVE
70-6430	A/OIL PUMP	E6430	A/OIL PUMP BODY
70-6454	SPINDLE	E6454	GEAR SPINDLE
70-6455	FEED GEAR	E6455	OIL PUMP GEAR
70-6459	DOWEL	E6459	DOWELL
70-6464	BUSHING	E6464	SPINDLE BUSH
70-6496	GASKET	E6496	GASKET
70-6501	FILTER ASSY	E6501	FILTER ASSY
70-6502	BASE PLATE	E6502	PUMP BASE PLATE
70-6506	ROD	E6506	PUSH ROD
70-6508	GUIDE BLOCK	E6508	TAPPET BLOCK
70-6509	BLOCK	E6509	TAPPET BLOCK
70-6519	C/BREAKER COVER	E6519	C/B COVER
70-6521	PILLAR BOLT	E6521	BOLT
70-6522	STUD	E6522	MOUNTING STUD
70-6523	NUT	E6523	CAMSHAFT NUT
70-6524	PINION	E6524	TIMING PINION
70-6525	COVER	E6525	OIL PUMP COVER
70-6559	WASHER	E6559	WASHER
70-6560	O RING	E6560	O RING
70-6561	INLET ROCKER BOX	E6561	ROCKER BOX
70-6562	EXHAUST ROCKER BOX	E6562	ROCKER BOX
70-6563	COVER	E6563	R/BOX COVER
70-6564	COVER	E6564	R/BOX COVER
70-6567	SPRING	E6567	OIL SPRING
70-6570	OIL PUMP SEAL	E6570	OIL PUMP SEAL
70-6571	ELEMENT	E6571	FILTER ELEMENT
70-6573	PIPE	E6573	OIL PIPE STUD
70-6574	PIPE	E6574	OIL PIPE STUD
70-6577	PLUG	E6577	OILWAY PLUG
70-6580	COVER PLATE	E6580	COVER PLATE
70-6584	PLUG	E6584	OIL PLUG
70-6596	DOMED NUT	E6596	CAP
70-6742	WASHER	E6742	WASHER
70-6743	CLIP	E6743	FINNED CLIP
70-6744	BOLT	E6744	CLIP BOLT
70-6836	GUDGEON PIN	E6836	GUDGEON PIN
70-6838	A/PISTON RING	E6838	TAPER COMP RING
70-6840	CIRCLIP	E6840	CIRCLIP
70-6848	CLIP	E6848	CLIP
70-6861	A/PIN	E6861	GUDGEON PIN
70-6881	SPINDLE	E6881	GEAR SPINDLE
70-6885	BUSH	E6885	GEAR BUSH
70-6889	GEAR	E6889	OIL PUMP DRIVE
70-6890	SPROCKET	E6890	ENG SPROCKET
70-6955	TUBE	E6955	COVER TUBE
70-7037	B/BACK-PLATE	E7037	COVER PLATE
70-7246	GEAR ASSY	E7246	OIL PUMP GEAR
70-7248	DRIVING GEAR	E7248	OIL PUMP GEAR
70-7249	GEAR	E7249	DRIVEN GEAR
70-7250	SCREW	E7250	GEAR SCREW

PART NUMBER	B S A PART DESCRIPTION	PART NUMBER	T R I U M P H PART DESCRIPTION
70-7354	SCREW	E7354	SCREW
70-7505	RUBBER	E7505	RUBBER
70-7512	B/CLAMP	E7512	SILENCER CLIP
70-7565	B/OIL SEAL	E7565	OIL SEAL
70-7590	OIL VALVE BODY	E7590	OIL VALVE BODY
70-7591	SPRING	E7591	SPRING
70-7650	BEARING	E7650	INT/WHL BEARING
70-7651	PIN	E7651	ROCKER BALL PIN
70-7739	TAPPET	E7739	TAPPET
70-7777	EX VALVE	E7777	EX VALVE
70-7778	STUD	E7778	GENERATOR STUD
70-7779	STUD	E7779	STUD
70-7787	ROCKER SPINDLE	E7787	ROCKER SPINDLE
70-7790	INLET ROCKER	E7790	INLET ROCKER
70-7791	EX ROCKER	E7791	EXHAUST ROCKER
70-7820	WASHER	E7820	DIST WASHER
70-7831	BOLT	E7831	BOLT
70-7858	JOINT GASKET	E7858T	GASKET
70-7885	SEALING PLUG	E7885	SEALING PLUG
70-7911	ROCKER BOX	E7911	ROCKER BOX
70-7918	INNER TIMING COVER	E7918	INNER COVER CTE
70-7958	RING	E7958	STEEL RING
70-7990	EX MANIFOLD	E7597	EX/MANIFOLD
70-7996	STUD	E7996	STUD
70-8039	ENG SPKT SHIM .015	E8039	SHIM
70-8137	NUT	E8137	NUT
70-8232	TIMING COVER	E8232	TIMING COVER
70-8259	O RING	E8259	SEALING RING
70-8277	PISTON RING	E8277	RING
70-8315	CAMSHAFT BUSH	E8315	CAMSHAFT BUSH
70-8720	COLLAR	E8720	TOP COLLAR
70-8731	SPRING WASHER	E8731	WASHER
70-8732	WASHER	E8732	WASHER
70-8737	COVER	E8737	COVER
70-8738	STUD	E8738	CYL/BASE STUD
70-8740	HOUSING	E8740	TACHO HOUSING
70-8741	GEAR	E8741	TACHO DRVN GEAR
70-8742	HOUSING	E8742	BEARING HOUSING
70-8744	SCREW	E8744	HOUSING SCREW
70-8745	STUD	E8745	CAP STUD
70-8746	OIL FEEDPIPE	E8746	FEED PIPE
70-8748	OIL FEEDPIPE	E8748	FEED PIPE
70-8751	DOWEL	E8751	DOWEL
70-8752	OIL VALVE PISTON	E8752	OIL PISTON
70-8754	WASHER	E8754	WASHER
70-8755	PLUG	E8755	TIMING PLUG
70-8756	GROMMET	E8756	GROMMET
70-8760	NUT	E8760	SEAL NUT
70-8763	NUT	E8763	ROTOR NUT
70-8764	CAMSHAFT	E8764	IN CAMSHAFT
70-8765	CAMSHAFT	E8765	EX CAMSHAFT
70-8768	CIRCLIP	E8768	WHEEL CIRCLIP
70-8770	WASHER	GS308	WASHER

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
70-8770	WASHER	E8770	WASHER
70-8773	GASKET	E8773	GASKET
70-8774	DOWEL	E8774	CRANKCASE DOWEL
70-8776	WASHER	E8776	WASHER
70-8778	CRANKSHAFT ASSY	E8778	CRANKSHAFT ASSY
70-8780	BEARING	E8780	MAIN BEARING
70-8781	CYLINDER HEAD	E8781	CYL HEAD ASSY
70-8782	O RING	E8782	O RING
70-8783	PIN	E8783	ADJUSTER
70-8785	TAB WASHER	E8785	LOCKWASHER
70-8786	TUBE	E8786	OILER TUBE
70-8787	SPRING	E8787	VALVE SPRING
70-8788	SPRING	E8788	VALVE SPRING
70-8789	CUP	E8789	BOTTOM CUP
70-8817	STUD	E8817	BARREL STUD
70-8819	BOLT	E8819	ROCKER BOX BOLT
70-8820	BOLT	E8820	ROCKER BOX BOLT
70-8836	CON ROD	E8836	CUNN ROD
70-8860	SPHERICAL WASHER	E8860	WASHER CLIP BOLT
70-8896	WASHER	E8896	WASHER
70-8904	OIL PIPE	E8904	OIL FEED PIPE
70-8905	OIL PIPE	E8905	OIL RETURN PIPE
70-8906	OIL PIPE	E8906	OIL COOLER PIPE
70-8907	OIL PIPE	E8907	OIL COOLER PIPE
70-8914	CYL LINER	E8914	BARREL LINER
70-8917	TAPPET ASSY	E8917	TAPPET ASSY
70-8953	CHAINCASE COVER	E8953	PRIMARY COVER
70-8981	WASHER	E8981	INSULATING BLOCK
70-9001	OIL PUMP CPTC	E9001	OIL PUMP
70-9022	A/RINGS	E9022	PISTON RING 040
70-9023	INSERTS 010 /PER PR/	E9023	BEARING 010 /PR/
70-9024	INSERTS 020 /PER PR/	E9024	BEARING 020 /PR/
70-9025	INSERTS 030 /PER PR/	E9025	BEARING 030 /PR/
70-9026	INSERTS 040 /PER PR/	E9026	BEARING 040 /PR/
70-9027	INSERTS 010 /PER PR/	E9027	BEARING 010 /PR/
70-9028	INSERTS 020 /PER PR/	E9028	BEARING 020 /PR/
70-9029	INSERTS 030 /PER PR/	E9029	BEARING 030 /PR/
70-9030	INSERTS 040 /PER PR/	E9030	BEARING 040 /PR/
70-9036	SILENCER	E9036	SILENCER D/SIDE
70-9037	SILENCER	E9037	SILENCER T/SIDE
70-9060	TUBE	E9060	RUBBER CONN
70-9073	BUSH	E9073	T/ARM BUSH
70-9237	SLEEVE NUT	E9237	SLEEVE NUT
70-9239	WASHER	E9239	WASHER
70-9240	WASHER	E9240	WASHER
70-9242	SUPPORT ARM	E9242	LINKAGE ARM
70-9243	TRUNNION	E9243	TRUNNION
70-9251	SPINDLE	E9251	SPINDLE
70-9252	ADJUSTING SCREW	E9252	ADJ SCREW
70-9253	LOCKNUT	E9253	LUCKNUT
70-9254	SPRING	E9254	ADJ SPRING
70-9255	CIRCLIP	E9255	SPINDLE CIRCLIP
70-9256	TRUNNION	E9256	TRUNION

PART NUMBER	B S A PART DESCRIPTION	PART NUMBER	T R I U M P H PART DESCRIPTION
70-9258	SADDLE WASHER	E9258	SAUDLE WASHER
70-9263	CYL BARREL	E9263	CYL BARREL
70-9266	WASHER	E9266	WASHER
70-9270	OIL PIPE ASSY	E9270	CUNNECTING PIPE
70-9271	ROCKER OIL PIPE	E9271	OIL PIPE ASSY
70-9274	OIL PIPE	E9274	OIL PIPE ASSY
70-9278	ARM ASSY	E9278	ARM ASSY
70-9368	CROSS TUBE	E9368	COUPLING PIPE
70-9372	B25 CRANKCASE COMP	E9372	CRANKCASE
70-9382	DRIVE GEAR	E9382	DRIVE GEAR
70-9383	WASHER	E9383	THRUST WASHER
70-9384	SEALING PLATE	E9384	SEALING PLATE
70-9388	B25 INNER T/COVER	E9388	INNER COVER
70-9428	REV DRIVE ASSY	E9428	GEAR BOX
70-9429	RETAINING PIN	E9429	PIN
70-9430	O RING	E9430	O RING
70-9431	PIN	E9431	LOCATING PIN
70-9432	JOINT GASKET	E9432	WASHER
70-9433	COVER	E9433	OUTER COVER
70-9465	DONEL	E9465	GUIDE/BLK DONEL
70-9510	EXHAUST PIPE ADAPTOR	E9510	EX PIPE ADAPTOR
70-9526	SCAVENGE PLUG	E9526	BLANKING PLUG
70-9558	ROCKER SPINDLE	E9558	SPINDLE
70-9586	ADAPTOR	E9586	SLEEVE
70-9601	SCREW	E9601	SCREW
70-9626	CAP	E9626	CAP
70-9627/003	CLIP ASSY	E9627	CLIP
70-9634	SHIM	E9634	SHIM
70-9679	HEATSHIELD	E9679	HEAT SHIELD
70-9727	BOLT	E9727	BOLT CON ROD
70-9737	WASHER	E9737	JOINT WASHER
70-9739	PISTON RING	E9739	A/SCRAPEK RING
70-9740	CONNECTING ROD	E9740	CONN ROD
70-9741	PISTON STD	E9741	PISTON ASSY
70-9762	PISTON CPTC	E9762	PISTON
70-9763	PISTON CPTC	E9763	PISTON
70-9764	PISTON CPTC	E9764	PISTON ASSY
70-9779	ROCKER	E9779	ROCKER
70-9780	ROCKER	E9780	ROCKER
70-9781	IN ROCKER D/S	E9781	ROCKER
70-9782	EX ROCKER D/S	E9782	ROCKER
70-9800	BREATHER PLUG	E9800	FILLER PLUG
70-9802	CAMSHAFT PINION	E9802	PINION CAMSHAFT
70-9820	SPACER	E9820	SPACER
70-9821	CUP	E9821	CAP
70-9843	SEALING RUBBER	E9843	SEALING RUBBER
70-9848	FLYWHEEL ASSY	E9848	FLYWHEEL
70-9856	SLEEVE	E9856	SLEEVE
70-9880	SPRING	E9880	RETURN SPRING
70-9911	A/CONN ROD CPTC	E9911	CUN ROD
70-9914	A/BOLT	E9914	BOLT
70-9979	FILTER	E9979	FILTER
71-0003	SCREW	E10003	SCREW

H S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
71-0006	POINTER SCREW	E10006	SCREW
71-0007	SCREW	E10007	SCREW
71-0037	KEY	E10037	KEY TIMING PINION
71-0245	WASHER	E10245	WASHER
71-0280	BOLT	E10280	BOLT TORQUE STAY
71-1003	WASHER	E11003	WASHER
71-1031	SPACER	E11031	SPACER
71-1051	SPINDLE	E11051	IDLER GEAR SPINDLE
71-1058	PRIMARY COVER	E11058	PRIMARY COVER
71-1065	WASHER	E11065	WASHER
71-1070	O RING	E11070	O RING
71-1119	CRANKCASE	E11119	CRANKCASE
71-1129	TAB WASHER	E11129	TAB WASHER
71-1133	OIL PUMP	E11133	OIL PUMP
71-1139	HOUSING	E11139	SPINDLE HOUSING
71-1142	O/PUMP SPINDLE	E11142	SPINDLE
71-1143	GEAR	E11143	SCAVENGE GEAR
71-1147	A/SPINDLE	E11147	GEAR SPINDLE
71-1148	DOWEL	E11148	DOWEL
71-1165	V/SPRING CUP	E11165	COLLAR
71-1166	V/SPRING COTTER	E11166	SPLIT CULLET
71-1168	ROCKER PIPE	E11168	ROCKER PIPE
71-1172	ROCKER PIPE	E11172	ROCKER PIPE
71-1175	CONNECTING TUBE	E11175	CONNECTING TUBE
71-1178	EX PIPE	E11178	EX PIPE
71-1181	MUFFLER USE 71-1767	E11181	MUFFLER
71-1184	CLIP	E11184	CLIP
71-1190	GASKET	E11190	U RING
71-1192	CORR RING	E11192	RING
71-1193	RING	E11193	RING
71-1194	CORR RING	E11194	RING
71-1221	HEAT SHIELD	E11221	HEAT SHIELD
71-1222	SUPPORT STRIP	E11222	SUPPORT STRAP
71-1223	DISTANCE PIECE	E11223	DISTANCE PIECE
71-1227	VALVE GUIDE IN 002	E11227	VALVE GUIDE 002
71-1228	IN VALVE GUIDE, 015	E11228	VALVE GUIDE 015
71-1229	EX VALVE GUIDE	E11229	VALVE GUIDE 002
71-1230	VALVE GUIDE EX 015	E11230	VALVE GUIDE 015
71-1238	PUSH ROD	E11238	PUSHROD
71-1270	CAP	E11270	FILLER CAP
71-1271	SHIELD GEARBOX MN BR	E11271	HEAT SHIELD
71-1276	CAMSHAFT	E11276	CAMSHAFT
71-1303	A/CARB ADAPTOR	E11303	A/ADAPTOR C/W BUSHES
71-1327	OIL RELEASE VALVE	E11327	RELEASE VALVE
71-1349	STUD	E11349	A/STUD
71-1351	A/OIL PUMP	E11351	A/OIL PUMP C/PTL
71-1353	A/TAB WASHER	E11353	A/TAB WASHER
71-1416	A/GASKET	E11416	CARB FLANGE WASHER
71-1418	GASKET	E11418	GASKET
71-1419	GASKET	E11419	GASKET
71-1425	GASKET	E11425	GASKET
71-1439	WASHER	E11439	WASHER
71-1442	GASKET	E11442	GASKET

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
71-1445	GASKET	E11445	GASKET
71-1446	GASKET	E11446	JOINT WASHER
71-1457	GASKET	E11457	GASKET
71-1462	GASKET	E11462	GASKET
71-1599	PLUG 9/16 UNF	E11599	HANGER
71-1619	GC72 POINTER	E11619	POINTER
71-1679	A/CAMSHAFT KEY	E11679	KEY
71-1710	SILENCER	E11710	A/SILENCER
71-1733	GASKET	E11733	GASKET
71-1801	A/PISTON	E11801	STD PISTON
71-1802	A/PISTON	E11802	PISTON
71-1803	A/PISTON	E11803	PISTON
71-1819	A/SHIM	E11819	A/SHIM
71-1820	A/SHIM	E11820	N/SHIM
71-1860	ADAPTON	E11860	ADAPTER
71-1869	CRANKCASE CPTC	E11869	CRANKCASE
71-1989	A/DOWEL	E11989	DOWEL
71-2026	COVER	E12026	PHI COVER
71-2060	SILENCER ASSY	E12060	SILENCER ASSY
71-2079	PLUG	E12079	PLUG
71-2080	JOINT WASHER	E12080	JOINT WASHER
71-2114	HEAT SHIELD	E12114	HEAT SHIELD
71-2115	GASKET	E12115	GASKET
71-2119	A/HOUSING	E12119	HOUSING
71-2122	A/OIL PUMP GEAR	E12122	GEAR
71-2124	A/OIL PUMP GEAR	E12124	SCAVENGE DRIVEN GEAR
71-2125	A/OIL PUMP	E12125	PUMP BODY
71-2176	A/EX PIPE	E12176	EX PIPE
71-2196	A/ROCKER BOX	E12196	ROCKER BOX
71-2198	GASKET	E12198	GASKET
71-2223	A/VALVE	E12223	VALVE SPRING OUTER
71-2226	A/EX VALVE GUIDE	E12226	VALVE GUIDE
71-2227	A/OIL PUMP CPTC	E12227	OIL PUMP
71-2229	A/SPINDLE	E12229	PUMP SPINDLE
71-2230	A/GEAR	E12230	FEED GEAR DRIVEN
71-2231	A/INLET VALVE GUIDE	E12231	VALVE GUIDE INLET
71-2233	GASKET	E12233	GASKET
71-2238	CYL HEAD CPTC	E12238	CYL HEAD
71-2246	TIMING WHEEL	E12246	A/INT TIMING GEAR
71-2249	THRUST WASHER	E12249	A/THRUST WASHER
71-2250	SPINDLE	E12250	A/INT GEAR SPINDLE
71-2273	USE 71-2946	E12273	OUTER TIMING COVER
71-2284	CR/SHFT & F/WHEEL	E12284	CRANKSHAFT
71-2291	A/OIL PUMP WASHER	E12291	DISTANCE WASHER
71-2297	A/CAMSHAFT CPTC	E12297	CAMSHAFT
71-2299	A/SPACING WASHER	E12299	DIST WASHER
71-2337	PIPE	E12337	ROCKET FEED
71-2338	PLUG	E12338	PLUG
71-2366	VALVE SPRING CUPS	E12366	CUP
71-2369	A/OIL VALVE	E12369	A/OIL PRES HLS VALVE
71-2382	SILENCER	E12382	SILENCER
71-2400	SILENCER	E12400	SILENCER
71-2402	TAILPIPE HEATSHIELD	E12402	TAIL PIPE

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
71-2411	SILENCER ASSEMBLY	E12411	SILENCER
71-2513	A/TAPPET	E12513	TAPPET
71-2547	DOWEL	E12547	DOWEL
71-2656	OIL SCAV P/ASSY	E12656	OIL SCAV PIPE
71-2658	OIL FEED PIPE	E12658	OIL FEED PIPE
71-2744	CAP	E12744	A/OIL FILLER CAP
71-2792	B/WASHER	E12792	A/JOINT WASHER
71-2793	A/GASKET	E12793	A/JOINT WASHER
71-2851	B/VALVE SPRING	E12851	A/CR/CS UND/SHLD
71-3319	002 VLV.GD.71/250CC	E13319	002 VLV.GD.71/250CC
71-3320	015 VLV.GD.71/250CC	E13320	015 VLV.GD.71/250CC
71-3321	002 VLV.GD.71/250CC	E13321	002 VLV.GD. 71/250CC
71-3322	015 VLV.GD.71/250CC	E13322	015 VLV.GD. 71/250CC
75-0124	O RING	E3253	SEALING RING
75-0176	WASHER	E3446	WASHER
75-2719	SADDLE WASHER	E3768	U WASHER
75-2725	EX PIPE CLIP	E2271	CLIP
75-3121	SPINDLE	T1279	K/S SPINDLE
75-3144	NUT 5/16 BSC	W1058	ADJUSTER NUT
75-4909	H/BAK SLEEVE	H1425	SLEEVE
75-5088	WASHER	H431	WASHER
75-5091	SLEEVE D/S AND T/S	H1896	DAMPER SLEEVE
75-5095	CAP	H1844	MEMBER CAP
75-5097	COVER TUBE ASSEMBLY	H1654	COVER TUBE
75-5099	OIL SEAL	H1500	OIL SEAL
75-5104	BEARING	H443	LOWER BEARING
75-5105	BEARING	H441	UPPER BEARING
75-5110	GAITER	H1645	FORK GAITER
75-5119	CLIP	H2083	GAITER CLIP
75-5529	SPRING	W592	LEVER SPRING
75-6594	NUT	W1691	BOLT NUT
75-9076	SPANNER	U362	SPANNER
76-0210	SCREW	E8170	SCREW
76-0271	NUT	T2686	NUT
76-0290	BOLT	E1545	BOLT
76-0308	ADAPTOR	E8082	OIL FEED UNION
76-0378	WASHER	E8083	WASHER
76-0528	RING	E8152	BEARING RING
76-0543	SCREW	F9171	SCREW
76-0546	SCREW	E8167	COVER SCREW
76-9136	CLIP	U1029	CLIP
82-1335	WASHER	F1335	WASHER
82-1747	NUT	F1747	NUT
82-1880	WASHER BANJO BOLT	F1880	WASHER
82-3017	DIST COLLAR	F3017	A/DIST COLLAR
82-3098	A/CLIP	F3098	CABLE CLIP
82-4076	BUSH	F4076	S/ARM BUSH
82-4366	DISTANCE PIECE	F4366	SPACER
82-4671	SPRING CTR STAND	F4671	SPRING
82-4717	NUT	F4717	PANEL NUT
82-5332	B/GRUMMET	F5332	GRUMMET
82-5343	PLUG	F5343	DRAIN PLUG
82-5943	PEG	F5943	PEG

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
82-6042	BUSH	F6042	S/ARM BUSH
82-6310	B/WASHER	F6310	PLAIN WASHER
82-6738	B/STEERING LOCK/KEY	F6738	LOCK & KEY
82-6821	BOBBIN	F6821	BOBBIN
82-6874	METER SCREW SPRING	F6874	SCREW
82-7021	PROP STAND PIVOT BLT	F7021	SNIVEL PIN
82-7044	DISTANCE PIECE	F7044	A/DISTANCE PIECE
82-7365	STRAP	F7365	TORQUE STAY
82-7387	NUT	F7387	ROD ADJUSTER
82-7431	BATTERY VENT PIPE	F7431	VENT PIPE
82-7835	RUBBER BUFFER	F7835	BUFFER
82-7848	SEAL	F7848	WASHER
82-8033	A/STRAP	F8033	BATT STRAP
82-8140	WASHER	F8140	REFLECTOR MAT
82-8195	PUSH ON FIX	F8195	PUSH FIX
82-8245	LOCKWASHER	F8245	RETAINER
82-8255	PROTECT STRIP	F8255	A/PROTECTOR STRIP
82-8283	MOUNT PLATE	F8283	MOUNTING PLATE
82-8285	BASE PLATE	F8285	BATTERY CARRIER
82-8307	TUBE	F8307	TUBE
82-8349	BRACKET	F8349	BRACKET
82-8448	BRACKET	F8448	BRACKET
82-8451	FRAME	F8451	FRAME ASSY
82-8614/7	B44 SIDECOVER 1970	F8614	PANEL U/S
82-8819	SKID PLATE	F8819	ENGINE SHIELD
82-8874	BANJO	F8874	BANJO UNION
82-8901	ADAPTER	F8901	ADAPTER
82-8933	COVER	F8933	WASHER
82-8946	SCREW	F8946	SCREW
82-8950	OIL TANK	F8950	OIL TANK
82-8953	GROMMET	F8953	GROMMET
82-8972	BRACKET	F8972	BRACKET ASSY
82-9008	FLAT WASHER	F9008	WASHER
82-9020	SPRING WASHER	F9020	WASHER
82-9054	B/RUBBER/R/FOOTREST	F9054	RUBBER
82-9057	BOLT	F9057	BULT
82-9063	DISTANCE PIECE TOP	F9063	DISTANCE TUBE
82-9065	WASHER	F9065	WASHER
82-9210	SWINGING ARM	F9210	SWINGING ARM
82-9214	B44 V/S FRAME	F9214	FRAME
82-9222	RUBBER ANTI ROLL	F9222	TANK ANTI-ROLL RB
82-9274	CAP	F9274	TERMINAL
82-9315	OIL COOLER	F9315	OIL COOLER
82-9322	PACKING RUBBER	F9322	CORNER PACKING
82-9327	SUPPORT	F9327	TAIL LAMP SUPP
82-9353	B/BATTER/RET/STRAP	F9353	BATTERY STRAP
82-9378	TORQUE STAY	F9378	TORQUE STAY L/H
82-9379	TONGUE STAY	F9379	TORQUE STAY R/H
82-9430	OILFILTER FRAME	F9430	TANK FILTER
82-9435	METERING SCREW	F9435	METERING SCREW
82-9436	PETROL PIPE	F9436	PETROL PIPE
82-9530	OIL PIPE SPRING	F9530	PROTECTION SPRG
82-9531	RETURN PIPE SPRING	F9531	PROTECTION SPRG

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
82-9561	GROMMET	F9561	COIL GROMMET
82-9562	GROMMET	F9562	GROMMET
82-9573	NUT	F9573	REFLECTOR NUT
82-9624	FOOTREST	F9624	FOOTREST T/S
82-9659	B/FILLER/CAP/D/COMP	F9659	FILLER CAP
82-9664	BREATHER PIPE	F9664	FRUHTOWER PIPE
82-9692	COVER	F9692	SWITCH COVER
82-9782	BEADING HOLDER	F9782	EA/BEADING HOLDER
82-9918	CLIP	F9918	CLIP OIL PIPE
82-9945	SILENCER BRACKET	F9945	BRACKET
82-9950	CHAINGUARD	F9950	CHAIN GUARD
82-9958	RR BRAKE PEDAL STOP	F9958	PEDAL STOP
82-9997	CHAIN OILER PIPE	F9997	OILER PIPE
83-0008	B/HOOK	F10008	HOOK SCREW
83-0033	BOLT	F10033	BOLT
83-0259	BOLT	F10259	BOLT
83-0270	TAIL LAMP SUPPORT	F10270	SUPPORT
83-0281	RUBBER	F10281	MOUNTING CUP
83-1270	WASHER	F11270	TAB WASHER
83-1339	B/SCREW	F11339	SCREW
83-1426	FOOTREST RH	F11426	F/REST HANGER D.S.
83-1428	FOOTREST LH	F11428	F/REST HANGER T.S.
83-1547	FILLER CAP	F11547	FILLER CAP
83-1603	IGN/COIL CLIP	F11603	CLIP
83-1606	PROP STAND LEG	F11606	PROPSTAND LEG
83-1607	FRAME	F11607	FRAME
83-1648/7	B44 OIL TANK 1970	F11648	OIL TANK
83-1651	DIPSTICK-CAP	F11651	FILLER CAP
83-1969	SPACER TUBE	F11969	SPACER TUBE
83-2004	FRONT ENG BLT SPACER	F12004	SPACER
83-2005	BOTTOM ENG STUD	F12005	SPACER
83-2006	RUBBER	F12006	RUBBER
83-2007	BEARING ABUTMENT RNG	F12007	ABUTMENT RING
83-2012	S/ARM INNER SLEEVE	F12012	SLEEVE
83-2013	SPINDLE	F12013	SPINDLE
83-2018	BATTERY CARRIER	F12018	BATTERY CARRIER
83-2023	TORQUE ARM	F12023	TORQUE ARM
83-2204	SUPPORT RUBBER	F12204	RUBBER
83-2209	H/LAMP BUSH	F12209	BUSH
83-2210	CLAMP WASHER	F12210	WASHER
83-2211	SPACER	F12211	SPACER
83-2216	REAR BRAKE PEDAL	F12216	CLAMP WASHER
83-2224	R CHAINGUARD	F12224	REAR CHAINGUARD
83-2233	THRUST WASHER	F12233	THRUST WASHER
83-2244	S/ARM OIL SEAL	F12244	OIL SEAL
83-2245	S/ARM BEARING	F12245	BEARING
83-2266	WASHER	F12266	WASHER
83-2508	SHOULDER SCREW	F12508	A/SHOULDER SCREW
83-2513	SWINGING ARM	F12513	SWINGING ARM
83-2521	S/ARM PIVOT BUSH	F12521	S/ARM BUSH
83-2569	RUBBER MOUNTING	F12569	GROMMET-FLASHER UNIT
83-2597	LEAF SPRING	F12597	SPRING
83-2616	REAR BRAKE ROD	F12616	BRAKE ROD

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
83-2617	PILLION F/R HANGER	F12617	HANGER
83-2625	CONNECTOR PIPE	F12625	CUNNECTION PIPE
83-2626	CONNECTION PIPE	F12626	CONNECTION PIPE
83-2660	F/B ANCHOR STRAP	F12660	STRAP
83-2669	SUPPORT PLATE	F12669	SUPPORT PLATE
83-2670	TERMINAL CLAMP	F12670	TERMINAL STRIP
83-2689	SPACER L/H/S	F12689	D PIECE
83-2690	SPACER R/H/S	F12690	D PIECE
83-2691	S/ARM PIVOT SLEEVE	F12691	SLEEVE
83-2692	DIRT SLEEVE	F12692	DUST EXCLUDER
83-2693	BRACKET REAR LAMP	F12693	LAMP BRACKET
83-2716	RUBBER	F12716	FILTER RUBBER
83-2718	BRACKET CPTC	F12718	BRACKET
83-2726	REAR PLATE	F12726	REAR NU PLATE
83-2727	NO PLATE BRKT L/H	F12727	LH NO PLATE BRKT
83-2728	RH NU PLATE BRKT	F12728	BRACKET/RH
83-2753	T/L SUPPORT ASSY	F12753	T/L SUPPORT ASSY
83-2768	SUPPURT RAIL ASSY	F12768	CHROME SEATHAIL 71 B
83-2776	BOLT	F12776	BULT
83-2785	RIVET	F12785	RIVET
83-2786	MOUNTING BRKT	F12786	SUPPORT
83-2799	CIRCLIP	F12799	CINCLIP
83-2800	PETROL TAP	F12800	PETROL TAP B
83-2801	PETROL TAP	F12801	PETROL TAP B
83-2840	COVER RH GREEN	F12840	COVER RH BLACK
83-2841	PILLION FOOTREST	F12841	PILLION FOOTREST
83-2846	DISTANCE PIECE LH	F12846	DISTANCE PIECE
83-2847	DISTANCE PIECE RH	F12847	DISTANCE PIECE
83-2848	DISTANCE PIECE LH	F12848	DISTANCE PIECE
83-2849	DISTANCE PIECE RH	F12849	DISTANCE PIECE
83-2854	FOOTREST RH	F12854	FOOTREST RH
83-2858	FOOTREST L/H	F12858	HANGER RH
83-2860	R/BRAKE ROD	F12860	BRAKE ROD
83-2867	SEAT HINGE	F12867	HINGE
83-2980	RUBBER	F12980	MOUNTING
83-3014	END THRUST SEAL	F13014	SEAL
83-3021	RUBBER	F13021	MOUNTING RUBBER
83-3032	FTREST ASSY LH RH	F13032	PILLION FOOT REST
83-3035	FIXING BRKT	F13035	BRACKET
83-3040	PETROL PIPE	F13040	PETHOL PIPE
83-3046	CAP/DIPSTICK	F13046	A/DIPSTICK
83-3055	FRONT STRIP	F13055	TANK STRIP
83-3056	REAH STRIP	F13056	TANK STRIP
83-3061	CATCH ASSY	F13061	CATCH ASSY
83-3068	GROMMET	F13068	GROMMET
83-3069	GROMMET	F13069	GROMMET
83-3077	BREATHER PIPE	F13077	BREATHER PIPE
83-3078	OIL FEED PIPE	F13078	FLED PIPE
83-3079	OIL RETURN PIPE	F13079	RETURN PIPE
83-3080	OIL RETURN PIPE	F13080	RETURN PIPE
83-3081	CONNECTOR TUBE	F13081	TUBE
83-3082	COVER PLATE	F13082	COVER
83-3094	ANCHOR PEG	F13094	ANCHOR PIN

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
83-3142	DIPSTICK	F13142	DIP STICK
83-3165	DISTANCE PIECE	F13165	U ISTANCE PIECE
83-3170	CENTER STAND	F13170	CENTRE STAND
83-3174	SUPPORT RAIL	F13174	PAINTED SEATRAIL7125
83-3185	PETROL PIPE T PIECE	F13185	B/SUMP PLATE
83-3207	A/ANCHOR BOLT	F13207	A/HANGER BOLT
83-3212	RUBBER BEADING	F13212	RUBBER BEADING
83-3213	RUBBER STRIP	F13213	STRIP
83-3292	A/TOOL TRAY	F13292	A/TOOL TRAY
83-3295	A/STRIP	F13295	A/PROTECTOR STRIP
83-3296	A/ENGINE STAY	F13296	A/MOTOR STEADY STRAP
83-3417	A/SPRING CLIP	F13417	SPRING CLIP
83-3507	A/PETROL PIPE	F13507	A/PETROL PIPE
83-3522	A/RUBBER BUSH	F13522	A/MOUNTING RUBBER
83-3525	REORDER 60600092	F13525	REURDER 60600092
83-3543	CLIP	F13543	A/CLIP
83-3554	SPINDLE ASSY	F13554	A/SPINDLE
83-3556	ADJUSTER	F13556	A/ADJUSTER REAR CHN
83-3563	RUBBER	F13563	A/MTG HBR TOP TB RER
83-3565/003	REAR M/G	F13565	B/R MUDGD TR6C
83-3602	A/CULLAN	F13602	B/CULLAN
83-3604	GC72 DISTANCE PIECE	F13604	A/SPACER
83-3642	A/OIL FILTER ASSY	F13642	A/OIL FILTER ASSY
83-3643	A/SUMP PLATE ASSY	F13643	A/SUMP PLATE
83-3665	A/BACKET	F13665	GD/BRKT A/C LEVER
83-3793	GC72 SPRING	F13793	A/SPRING
83-3875	FILLER PETROL INK VR	F13875	A/FILL CAP
83-4133	B/FREST HANGER B50	F14133	FOOTREST HANGER
83-4277	DISTANCE PIECE	F14277	WASHER
89-3208	RUBBER	T2450	F/CHANGE RUBBER
89-5036	SPRING	H2644	SPRINGS
90-3061	CLIP	F8975	CLIP
90-3063	PIN	F9128	PIN
90-3064	SNIVEL	F9129	SNIVEL
90-4294	DISTANT PIECE	F9087	SPACER
90-5229	BUSH	H845	BOTTOM BUSH
90-5230	TOP BUSH	H1046	MEMBER BUSH
90-5232	TUBE L/H	H1040	LH OUTER MEMBER
90-5235	TUBE R/H	H1043	OUTER MEMBER
90-5239	CAP	H856	MEMBER CAP
90-5240	BOLT	W932	BOLT
90-5241	PLUG	H1042	DRAIN STUD
90-5242	STUD	H1048	STUD
90-5268	CABLE CLIP	E8172	CLIP
90-5694	NIPPLE	W965	SPUKE NIPPLE
90-5701	CIRCLIP	T532	CINCLIP
90-5702	SPINDLE	W967	SPINDLE
90-5703	LOCK RING	W968	LOCK RING
90-5710	CAM	W1128	CAM ASSY
90-5716	SPRING	W200	RETURN SPRING
90-5717	NUT	W1093	ANCHOR NUT
90-6213	WASHER	W1122	WASHER
90-6216	L/RING	W988	LOCKING RING

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
90-6241	BOLT	M1322	SPROCKET BOLT
90-6564	CLIP	M873	BRIDGE CLIP
90-7029	NUT	F9039	NUT
97-0095	SPRING PLATE	H95	SPRING PLATE
97-0111	CUP	H111	HEAD RACE CUP
97-0435	DISC	H435	DAMPER DISC
97-0439	CONE	H439	BOTTOM CONE
97-0519	PLUG	H519/001	PLUG
97-0519	PLUG	H519A	USE 1EA H 519/001
97-0565	WASHER	H565	WASHER
97-0688	B/SCREW	H688	SCREW
97-0919	B/NUT	H919	NUT
97-1018	CONE	H1018	CONE & COVER
97-1527	HANDLEBAR BUSH	H1527	BUSH
97-1529	WASHER	H1529	WASHER
97-1580	RUBBER H/B MOUNTING	H1580	CLAMP RUBBER
97-1581	DISTANCE PIECE	H1581	CLAMP BUSH
97-1618	BUSH	H1618	RUBBER BUSH
97-1656	WASHER	H1656	SUPPORT
97-1657	ABUTMENT	H1657	ABUTMENT
97-1708	WASHER	H1708	WASHER
97-1797	PLATE	H1797	DAMPER PLATE
97-1891	SPRING	H1891	MAIN SPRING
97-1892	FORK SPRING	H1892	MAIN SPRING
97-1932	H/LAMP SPACER	H1932	SPACER
97-1971	GROMMET	H1971	GROMMET
97-1994	SCREW	H1994	SWITCH SCREW
97-2090	RESTRICTOR	H2090	RESTRICTOR
97-2091	NUT	H2091	STOP NUT
97-2107	SLEEVE PIN	H2107	SLEEVE PIN
97-2108	NUT	H2108	SLEEVE NUT
97-2126	RESTRICTOR	H2126	FLANGED BOLT
97-2127	CIRCLIP	H2127	CIRCLIP
97-2154	SHUTTLE	H2154	SHUTTLE VALVE
97-2221	CUP H/B MOUNTING	H2221	H/BAR CUP
97-2237	HEAT SINK	H2237	HEAT SINK
97-2245	STANCHION TOP CAP	H2245	TOP CAP
97-2259	CUP	H2259	CUP
97-2266	WASHER	H2266	WASHER
97-2270	RETAINER	H2270	CABLE CLIP
97-2271	SLEEVE	H2271	SLEEVE
97-2275	PLUG	H2275	HEAT SINK PLUG
97-2288	STEM ASSEMBLY	H2288	USE 1EA H 3659
97-2290	BOLT	H2290	BOLT
97-2291	CLAMP	H2291	HANDLEBAR CLAMP
97-2293	LUG	H2293	TOP LUG
97-2297	BINNACLE	H2297	INST BINNACLE
97-2300	OUTER COVER L/M	H2300	OUTER COVER
97-2301	OUTER COVER R/M	H2301	OUTER COVER
97-2513	FORK BELLOWS	H2513	GAITERS
97-2514	HOLDER	H2514	HOLDER
97-2525	TOP YOKE	H2525	TOP YOKE
97-2526	BOTTOM YOKE	H2526	BOTTOM YOKE

THE BIRMINGHAM SMALL ARMS COMPANY INCORPORATED  
COMMON PARTS COMPARISON

PART NUMBER	B S A PART DESCRIPTION	PART NUMBER	T R I U M P H PART DESCRIPTION
97-2549	CAP	H2549	END CAP
97-2659	GROMMET	H2659	GRUMMET
97-2682	O RING	H2682	O RING
97-3601	SLEEVE	H3601	ADJUSTER SLEEVE
97-3619	STAY	H3619	FRONT STAY
97-3626	CUP ASSY	H3626	CUP ASSY
97-3632	NUT	H3632	SLEEVE NUT
97-3633	COVER TUBE	H3633	NUT
97-3635	FORK BELLOWS	H3635	TELESCOPIC GAITER
97-3637	FORK STANCHION	H3637	STANCHION
97-3638	SPRING SUPPORT	H3638	SPRING SUPPORT
97-3639	COVER TUBE	H3639	LOWER COVER TUBE
97-3652	FORK SLEEVE	H3652	FURK SLEEVE
97-3671	FRONT FORK ASSY	H3671	FR FORK CPTC
97-3672	FORK INNER SLEEVE	H3672	INNER SLEEVE
97-3678	FR FORK SPRING	H3678	FORK SPRING
97-3682	BRACKET	H3682	BRACKET
97-3689	MOUNTING PLATE	H3689	MOUNTING BRACKET
97-3693	FURK SLEEVE L/H	H3693	TOP COVER
97-3694	FORK SLEEVE R/H	H3694	TOP COVER
97-3875	DAMPER ROD & KNOB	H3875	DAMPER ROD
97-3893	DRAIN PLUG WASHER	H3893	WASHER
97-3894	DRAIN PLUG	H3894	DRAIN PLUG
97-3895	FRONT FORK	H3895	FORK ASSY
97-3904	FORK SHAFT	H3904	STANCHION
97-3906	STANCHION	H3906	STANCHION
97-3911	FORK ASSY	H3911	FR FORK CPTC
97-3922	BOTTOM MEMBER	H3922	USE IEA H 2295
97-3926	SQUARE NUT	H3926	SQUARE NUT
97-3947	FR FORK END CAP	H3947	SPINDLE CAP
97-3954	OUTER MEMBER RH	H3954	BOTTOM MEMBER RH
97-3985	TOPIYUKE CMPT	H3985	TOP YOKE
97-3987	BOTTOM YOKE	H3987	BOTTOM YOKE
97-3996	DAMPER TUBE	H3996	DAMPER TUBE
97-4001	OIL SEAL	H4001	OIL SEAL
97-4002	SCRAPER SLEEVE	H4002	SCRAPER SLEEVE
97-4003	VALVE O SPRING	H4003	O RING
97-4004	WASHER	H4004	SEAL
97-4007	STANCHION	H4007	STANCHION
97-4008	TOP CAP NUT	H4008	TOP CAP NUT
97-4009	RECOIL SPRING	H4009	RECOIL SPRING
97-4010	DAMPER WASHER	H4010	WASHER
97-4011	SPRING	H4011	SPRING
97-4012	NUT FRONT FORK VALVE	H4012	VALVE NUT
97-4020	VALVE	H4020	VALVE
97-4021	SPLIT RUBBER BUSH	H4021	RUBBER BUSH
97-4022	F/MUUGUARD BRKT	H4022	BRACKET
97-4023	TACH&SPEEDO HOLDER	H4023	TACH&SPEEDO HOLDER
97-4026	TACH&SPEEDO HOLDER	H4026	TACH&SPEEDO HOLDER
97-4028	DUST COVER	H4028	DUST COVER
97-4029	STEERING STEM NUT	H4029	STEERING STEM NUT
97-4031	TAPER ROLLER BRG	H4031	TAPER ROLLER BRG
97-4032	R/H OUTER MEMBER	H4032	OUTER MEMBER

B S A		T R I U M P H	
PART NUMBER	PART DESCRIPTION	PART NUMBER	PART DESCRIPTION
97-4033	L/H OUTER MEMBER	H4033	OUTER MEMBER
97-4034	STEERING HEAD	H4034	A/STEERING HD RACE
97-4048	L/H H/L SUPP ASSY	H4048	HL BRACKET
97-4050	R/H H/L SUPP ASSY	H4050	RH H/L BRACKET
97-4058	L/H H/L BRACKET	H4058	L/H BRACKET
97-4060	R/H H/L BRACKET	H4060	R/H BRACKET
97-4062	HANDLE COMPLETE	H4062	HANDLEBAR
97-4071	TAB WASHER	H4071	TAB WASHER
97-4075	BRACKET	H4075	BRACKET
97-4076	ASSEMBLY END PLUG	H4076	IN PLUG ASSY
97-4080	FORK ASSY	H4080	FORK ASSY
97-4085	R/H OUTER MEMBER	H4085	RH OUTER MEMBER
97-4086	OUT MEM LHUSE97-4033	H4086	LH OUTER MEMBER
97-4087	USE 97-4011	H4087	USE H4011
97-4088	HEADLAMP BRACKET LH	H4088	HL BRACKET
97-4090	HEADLAMP BRACKET RH	H4090	HL BRACKET
97-4092	NUT	H4092	NUT
97-4093	H/BAR ASSY	H4093	A/HANDLEBAR
97-4102	NUT	H4102	BOTTOM NUT
97-4112	CLIP	H4112	CLIP
97-4113	A/FRONT FORK CPTC	H4113	FR FORK CPTC
97-4115	TOP YOKE	H4115	TOP YOKE
97-4138	A/BOTTOM YOKE	H4138	A/BOTTOM YOKE
97-4145	A/COLLAR	H4145	A/STEERING COLLAR
97-4146	F. MUDGUARD	H4146	A/FR FENDER
97-4154/293	FR M/GD FL. RD/BL. STR	H4154/104	F/MUDGU RED/BLK CSTR
97-4159	A/NUT	H4159	A/STEERING STEM NUT
97-4160	BRACKET HEAT SINK	H4160	A/BRACKET
97-4162	HEADLAMP SUPPORT LH	H4162	A/LH H/L BRKT
97-4163	HEADLAMP SUPPORT RH	H4163	A/RH H/L BRKT
97-4166	WASHER TOP CAP	H4166	WASHER
97-4173	H/BAR	H4173	HANDLEBAR
97-4215	A/FORK SPRING	H4215	A/MAIN SPRING
97-4244	A/NUT	H4244	A/NUT
97-4251	A/HANDLEBAR	H4251	A/HANDLEBAR
97-4252	A/HANDLEBAR	H4252	H/BAR